



## **FXR Series Inverter/Charger**

**FXR2012A**

**FXR2524A**


**FXR3048A**

**VFXR2812A**

**VFXR3524A**

**VFXR3648A**

## **Installation Manual**

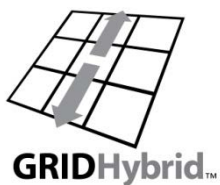



## About OutBack Power Technologies

OutBack Power Technologies is a leader in advanced energy conversion technology. OutBack products include true sine wave inverter/chargers, maximum power point tracking charge controllers, and system communication components, as well as circuit breakers, batteries, accessories, and assembled systems.

## Applicability

These instructions apply to OutBack inverter/charger models FXR2012A, FXR2524A, FXR3048A, VFXR2812A, VFXR3524A, and VFXR3648A only.

## Contact Information

Address:	Corporate Headquarters 17825 – 59 <sup>th</sup> Avenue N.E. Suite B Arlington, WA 98223 USA	European Office Hansastraße 8 D-91126 Schwabach, Germany
Telephone:	+1.360.435.6030 +1.360.618.4363 (Technical Support) +1.360.435.6019 (Fax)	+49.9122.79889.0 +49.9122.79889.21 (Fax)
Email:	Support@outbackpower.com	
Website:	<a href="http://www.outbackpower.com">http://www.outbackpower.com</a>	

## Disclaimer

UNLESS SPECIFICALLY AGREED TO IN WRITING, OUTBACK POWER TECHNOLOGIES:

(a) MAKES NO WARRANTY AS TO THE ACCURACY, SUFFICIENCY OR SUITABILITY OF ANY TECHNICAL OR OTHER INFORMATION PROVIDED IN ITS MANUALS OR OTHER DOCUMENTATION.

(b) ASSUMES NO RESPONSIBILITY OR LIABILITY FOR LOSS OR DAMAGE, WHETHER DIRECT, INDIRECT, CONSEQUENTIAL OR INCIDENTAL, WHICH MIGHT ARISE OUT OF THE USE OF SUCH INFORMATION. THE USE OF ANY SUCH INFORMATION WILL BE ENTIRELY AT THE USER'S RISK.

OutBack Power Technologies cannot be responsible for system failure, damages, or injury resulting from improper installation of their products.

Information included in this manual is subject to change without notice.

## Notice of Copyright

*FXR Series Inverter/Charger Installation Manual* © 2015 by OutBack Power Technologies. All Rights Reserved.

## Trademarks

OutBack Power, the OutBack Power logo, FLEXpower ONE, Grid/Hybrid, and OPTICS RE are trademarks owned and used by OutBack Power Technologies, Inc. The ALPHA logo and the phrase "member of the Alpha Group" are trademarks owned and used by Alpha Technologies Inc. These trademarks may be registered in the United States and other countries.

## Date and Revision

February 2015, Revision A

## Part Number

900-0166-01-00 Rev A



# Table of Contents

<b>Introduction .....</b>	<b>5</b>
Audience .....	5
Welcome to OutBack Power Technologies.....	5
Models .....	6
Inverter Model Names .....	6
Components and Accessories .....	6
<b>Planning .....</b>	<b>9</b>
Applications .....	9
Input Modes.....	10
Renewable Energy.....	10
Battery Bank.....	11
Generator.....	13
<b>Installation .....</b>	<b>15</b>
Location and Environmental Requirements.....	15
Tools Required.....	15
Mounting.....	16
Dimensions.....	16
Terminals and Ports.....	17
Wiring .....	18
Grounding .....	18
DC Wiring .....	20
AC Wiring.....	23
AC Sources.....	24
ON and OFF Wiring .....	25
Accessory Wiring.....	25
AUX Wiring .....	26
Generator Control.....	27
AC Configurations.....	29
Single-Inverter.....	29
Multiple-Inverter AC Installations (Stacking).....	30
Stacking Configurations .....	31
Functional Test.....	40
Emissions .....	40
Symbols Used .....	40
Definitions.....	41
<b>Index .....</b>	<b>43</b>

# List of Tables

Table 1	Models .....	6
Table 2	Components and Accessories .....	6
Table 3	Battery Bank Elements .....	12
Table 4	Ground Conductor Size and Torque Requirements.....	18
Table 5	DC Conductor Size and Torque Requirements .....	20
Table 6	Terms and Definitions.....	41

# List of Figures

Figure 1	FXR Series Inverter/Charger .....	5
Figure 2	Components.....	7
Figure 3	Applications (Example) .....	9
Figure 4	Dimensions .....	16
Figure 5	Terminals, Ports, and Features .....	17
Figure 6	DC Ground Lug .....	19
Figure 7	Chassis Ground/PE.....	19
Figure 8	Required Order of Battery Cable Hardware .....	21
Figure 9	Battery Terminal Covers .....	21
Figure 10	DC Cover Attachment .....	22
Figure 11	Turbo Fan Wiring .....	22
Figure 12	AC Terminals .....	23
Figure 13	AC Sources .....	24
Figure 14	AC Sources and Transfer Relay .....	24
Figure 15	ON/OFF Jumper and Connections .....	25
Figure 16	Accessory Connections .....	25
Figure 17	AUX Connections for Vent Fan (Example) .....	26
Figure 18	AUX Connections for Diversion (Example) .....	26
Figure 19	Two-Wire Generator Start (Example) .....	27
Figure 20	Three-Wire Generator Start (Example) .....	28
Figure 21	Single-Inverter Wiring.....	29
Figure 22	OutBack HUB10.3 and MATE3 .....	30
Figure 23	Example of Series Stacking Arrangement.....	31
Figure 24	Series Wiring (Two Inverters) .....	32
Figure 25	Example of Parallel Stacking Arrangement (Three Inverters) .....	33
Figure 26	Parallel Wiring (Four Inverters) .....	34
Figure 27	Example of Series/Parallel Stacking Arrangement (Four Inverters) .....	35
Figure 28	Series/Parallel Wiring .....	36
Figure 29	Example of Three-Phase Stacking Arrangement (Three Inverters) .....	37
Figure 30	Example of Three-Phase Stacking Arrangement (Nine Inverters) .....	37
Figure 31	Three-Phase Wiring (Three Inverters) .....	39



# Introduction

## Audience

This book provides instructions for the physical installation and wiring of this product. These instructions are for use by qualified personnel who meet all local and governmental code requirements for licensing and training for the installation of electrical power systems with AC and DC voltage up to 600 volts. This product is only serviceable by qualified personnel.

## Welcome to OutBack Power Technologies

Thank you for purchasing the OutBack FXR Series Inverter/Charger. This product offers a complete power conversion system between batteries and AC power. It can provide backup power, sell power back to the utility grid, or provide complete stand-alone off-grid service.

- 12-, 24-, and 48-volt models
- Output power from 2.0 kVA to 3.6 kVA
- Designed to be integrated as part of an OutBack Grid/Hybrid™ system using FLEXware™ components
- Battery-to-AC inverting with single-phase adjustable output for such standards as 120 Vac, 100 Vac, or 127 Vac (at 60 or 50 Hz)
- AC-to-battery charging (FXR systems are battery-based)
- Uses battery energy stored from renewable resources
  - ~ Can utilize stored energy from PV arrays, wind turbines, etc.
  - ~ OutBack FLEXmax charge controllers will optimize PV output
- Inverter load support for a small AC source
- Sell-back to utility (grid-interactive function)
  - ~ Available in 24- and 48-volt models
- Rapid transfer between AC source and inverter output with minimal delay time
- Uses the MATE3™ System Display and Controller or the AXS Port™ SunSpec Modbus Interface (sold separately) for user interface as part of a Grid/Hybrid system
- Supports the OPTICS RE™ online tool<sup>1</sup> for a cloud-based remote monitoring and control application
  - ~ Requires the MATE3 or the AXS Port
  - ~ Visit [www.outbackpower.com](http://www.outbackpower.com) to download
- Uses the HUB10.3™ Communications Manager for stacking as part of a Grid/Hybrid system
  - ~ Stackable in series, parallel, series/parallel, and three-phase configurations
- Listed to UL 1741 (2<sup>nd</sup> Edition) and CSA 22.2 by ETL



**Figure 1 FXR Series Inverter/Charger**

**NOTE:** This product has a settable AC output range. In this manual, many references to the output refer to the entire range. However, some references are made to 120 Vac or 60 Hz output. These are intended as examples only.

<sup>1</sup>Outback Power Technologies Intuitive Control System for Renewable Energy

# Models

Vented FXR (VFXR) models are intended for indoor or protected installation only. Vented inverters have an internal fan and use outside air for cooling. On average, the power of the vented models is rated higher than sealed models due to their greater cooling capabilities.

Sealed FXR models are designed for harsher environments and can survive casual exposure to the elements. However, enclosed protection is still recommended. (See page 15.) Sealed inverters have an internal fan, but do not use outside air for cooling. To compensate, sealed models are also equipped with the OutBack Turbo Fan assembly, using external air to remove heat from the chassis. (Vented models are not equipped with the Turbo Fan and cannot use it.)

**Table 1 Models**

Model	Type	Power	Battery	Application
FXR2012A	Sealed	2.0 kVA	12 Vdc	Off-grid, backup
VFXR2812A	Vented	2.8 kVA	12 Vdc	Off-grid, backup
FXR2524A	Sealed	2.5 kVA	24 Vdc	Off-grid, backup, grid-interactive
VFXR3524A	Vented	3.5 kVA	24 Vdc	Off-grid, backup, grid-interactive
FXR3048A	Sealed	3.0 kVA	48 Vdc	Off-grid, backup, grid-interactive
VFXR3648A	Vented	3.6 kVA	48 Vdc	Off-grid, backup, grid-interactive

## Inverter Model Names


FXR series model numbers use the following naming conventions.

- The model number includes “FXR” as the inverter series. “R” indicates that the FXR was designed for renewable applications. Off-grid and grid-interactive functions are integrated in the same inverter.
- Vented models are preceded with “V”, as in “VFXR3648A”. If a model number does not begin with “V”, it is a sealed model and is equipped with a Turbo Fan. This is not indicated otherwise.
- The first two digits show the power of that model. For example, “FXR2012A” is 2000 watts.
- The second pair of digits shows the inverter’s nominal DC voltage. For example, “FXR2524A” is 24 volts.
- The model number is followed by “A”. This designates the inverter’s output as nominally 120 Vac (used in North America, Latin America, Asia, and other regions).

## Components and Accessories

**Table 2 Components and Accessories**

Components to be Installed	Accessories Included
Battery Terminal Cover, red	FXR Inverter/Charger Installation Manual (this book)
Battery Terminal Cover, black	FXR Inverter/Charger Operator’s Manual
AC Plate	“WARNING ELECTRICAL SHOCK” sticker
DC Cover (DCC) or Turbo Fan	Silicone Grease Packet
Remote Temperature Sensor (RTS)	

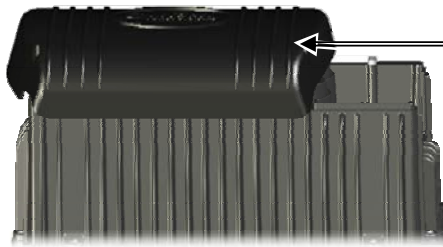

## DCC (DC Cover)


This covers the DC terminal area on vented inverters. The DCC provides space to mount other components such as a DC current shunt.



## AC Plate

This plate is used for installations which do not utilize OutBack's optional FLEXware conduit boxes. The knockouts are used to install strain relief for flexible cable.

**NOTE:** This plate is not to be connected to conduit.

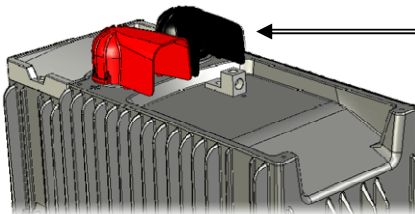

## Battery Terminal Cover


These protect the terminals from accidental contact. They are made of stiff plastic with a snap-on design.

Always keep covers installed during normal operation.

## Turbo Fan Cover

Included in place of the DCC on sealed inverters. Convectively cools chassis with the external OutBack Turbo Fan to allow maximum power.

**NOTE:** Do not install the Turbo Fan on a vented inverter.

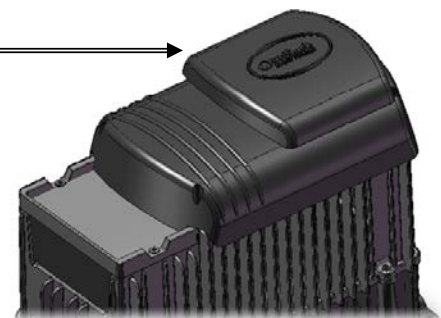

**NOTE:** The DC Cover or Turbo Fan does not replace the battery terminal covers. These covers must be installed in addition to the DCC or fan.

**Figure 2 Components**

## Introduction

[illegible]






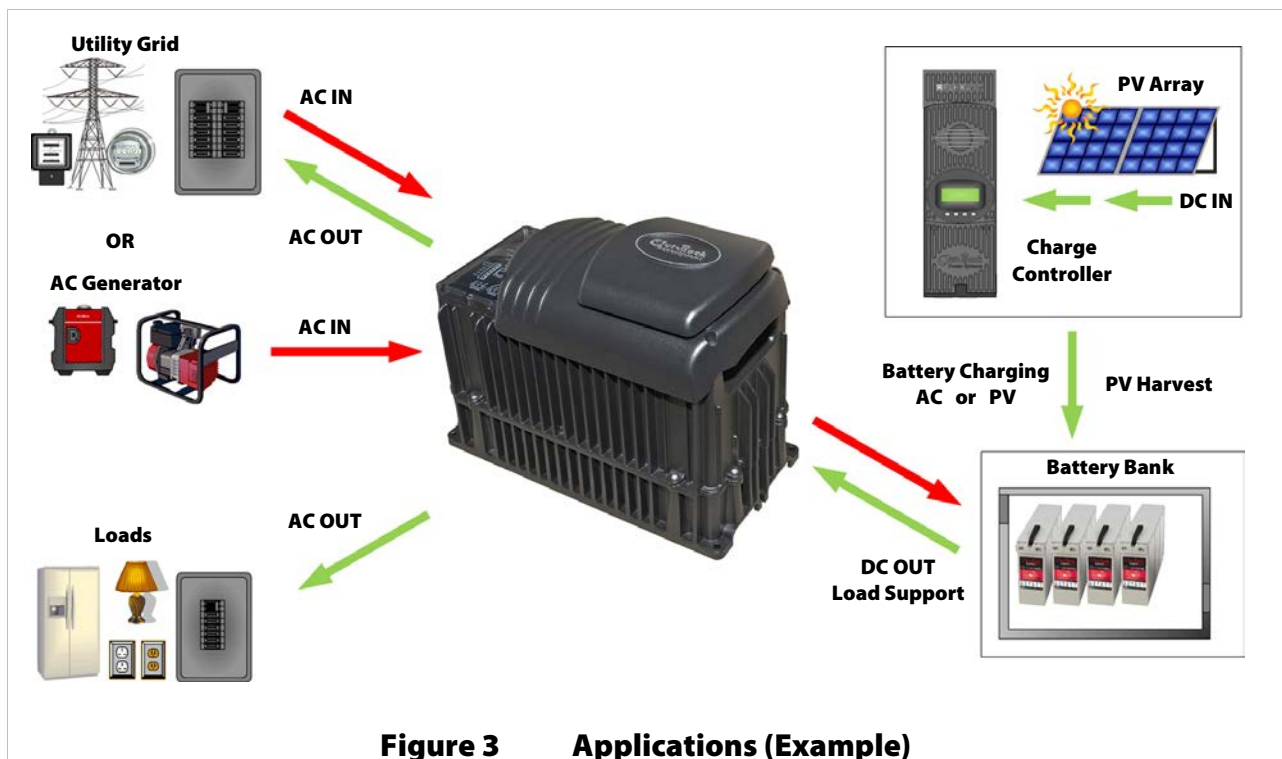
# Planning

## Applications

OutBack inverter/chargers are designed to use a battery bank to store energy. They work together with power from the utility grid or from renewable energy sources, such as photovoltaic (PV) modules, wind turbines, and other renewable sources. These sources charge the battery, which in turn is used by the inverter.

FXR series inverters have been designed to work with all types of renewable systems. These include off-grid, backup, and grid-interactive applications. The inverter's settings can be changed to accommodate many applications. Changes are made with the system display. 

The FXR inverter has one set of terminals for a single AC source. However, it can use two different AC sources when an external transfer switch is installed. The inverter can be independently programmed for each source. It is common to use utility grid power and a gas or diesel generator. Other combinations of AC sources are possible.



In Figure 3, the inverter uses a bidirectional AC input to sell power back to the utility grid. The power being delivered to the grid (labeled “AC Out”) is excess AC power not being used by the AC loads. Selling requires an inverter/charger with **Grid Tied** mode available and active.


### Input Modes

The FXR inverter has many modes of operation. See the *FXR Series Inverter/Charger Operator's Manual* for additional information on these modes, including reasons and considerations for using each mode.

The modes determine how the inverter interacts with an AC source. Each mode has functions and priorities that are intended for a designated application. Each of the inverter's input selections can be set to a different operating mode to support different applications.

- **Generator:** This mode is intended for a wide range of AC sources, including generators with a rough or imperfect AC waveform. The inverter can use generator power even when the generator is undersized or substandard.
- **Support:** This mode is intended for systems using the utility grid or a generator. AC source size, wiring, or other limitations may require temporary assistance to run very large loads. The inverter adds renewable or battery power to the AC source to ensure that the loads receive the power they require. This mode can reduce peak load demand from the utility.
- **Grid Tied:** This mode is intended for grid-interactive systems. When renewable energy sources charge the batteries above a selected "target" voltage, the inverter will send the excess energy to any loads. If the loads do not use all the excess energy, then the inverter will send (sell) that energy to the utility grid.
- **NOTE:** This mode is only available in 24-volt and 48-volt models.
- **UPS:** This mode is intended for systems primarily intended to maintain power to the loads with minimal interruption when switching between AC input and batteries. The response speed has been increased so that if an AC disconnect occurs the response time will be minimized.
- **Backup:** This mode is intended for systems that have the utility grid or a generator available, but do not have specialty requirements such as selling or support. The AC source will flow through the inverter to power the loads unless power is lost. If power is lost, then the inverter will supply energy to the loads from the battery bank until the AC source returns.
- **Mini Grid:** This mode is intended for systems that have the utility grid as an input and a sizable amount of renewable energy. The system will run off the renewable energy until the battery voltage falls to a specified low level. When this occurs, the inverter will connect to the utility grid to power the loads. The inverter will disconnect from the utility grid when the batteries are sufficiently recharged.
- **Grid Zero:** This mode is intended for systems that have the utility grid as an input and a sizable amount of renewable energy. The loads will remain connected to the utility grid, but will restrict the grid use except when no other power is available. The default power sources are the batteries and renewable energy, which attempt to "zero" the use of the AC source. The batteries are discharged and recharged (from renewable sources) while remaining grid-connected. This mode does not allow the inverter to charge batteries or sell.

### Programming

Selection of the input modes and all other inverter programming are performed using a system display such as the MATE3. The system display can customize a wide range of parameters. 


### Renewable Energy



The inverter cannot connect directly to PV, wind turbines, or other renewable sources. The batteries are the inverter's primary source of power. However, if the renewable sources are used to charge the batteries, the inverter can use their energy by drawing it from the batteries.

The renewable source is always treated as a battery charger, even if all of its power is used immediately. The renewable source must have a charge controller, or some other regulation method, to prevent overcharging. OutBack Power's FLEXmax family of charge controllers can be used for this purpose, as can other products.

## Battery Bank

When planning a battery bank, consider the following:

- **Cables:** Recommendations for battery cable size and length are shown on page 20. The maximum length will determine the placement of the battery bank. Local codes or regulations may apply and may take priority over OutBack recommendations.
- **Battery Type:** The FXR inverter/charger uses a three-stage charge cycle.
  - ~ The cycle was designed for lead-chemistry batteries intended for deep discharge. These include batteries for marine, golf-cart, and forklift applications. They also include gel-cell batteries and absorbed glass-mat (AGM) batteries. OutBack Power recommends the use of batteries designed specifically for renewable energy applications. Automotive batteries are strongly discouraged and will have a short life if used in inverter applications.
  - ~ Using OutBack's Advanced Battery Charging (ABC), most charging stages can be reconfigured or omitted from the cycle if necessary. The charger can be customized to charge a wide range of battery technologies including nickel, lithium-ion, and sodium-sulfur batteries. This programming is performed using the system display. 
- **Nominal Voltage:** These inverters are designed to work with specific battery bank voltages, which are different depending on inverter model. Before constructing a battery bank, check the inverter model and confirm nominal battery voltage.
- **Charger Settings and Maintenance:** A vented battery enclosure may be required by electric code and is usually recommended for safety reasons. It may be necessary to use a fan to ventilate the battery enclosure. Batteries must be regularly maintained according to the instructions of the battery manufacturer.

	<b>IMPORTANT:</b> Battery charger settings need to be correct for a given battery type. Always follow battery manufacturer recommendations. Making incorrect settings, or leaving them at factory default settings, may cause the batteries to be undercharged or overcharged.
	<b>CAUTION: Hazard to Equipment</b> Batteries can emit vapors which are corrosive over long periods of time. Installing the inverter in the battery compartment may cause corrosion which is not covered by the product warranty. (Sealed batteries may be an exception.)

- **Bank Size:** Battery bank capacity is measured in amp-hours. Determine the required bank specifications as accurately as possible, beginning with the items below. This avoids underperformance or wasted capacity. These ten items are obtainable in different places, summarized in Table 3 on the next page. Some of the information is specific to the site or application. Some can be obtained from the battery manufacturer. Information on OutBack products is available from OutBack Power Technologies or its dealers.
  - A. Size of load:
  - B. Daily hours of use:
  - C. Days of autonomy:
  - D. Application: This often helps define or prioritize the previous three items. Off-grid systems often require enough capacity to last for an extended period before recharging. Grid-connected systems frequently need only enough capacity for short-term backup during outages.
  - E. Conductor efficiency: Wire size and other factors will waste power due to resistance and voltage drop. Typical acceptable efficiency is 96 to 99%.
  - F. Inverter efficiency: FXR specifications list "Typical Efficiency" to help estimate operating loss.

These are the most basic and essential factors used to determine bank size.

Any losses are essentially amp-hour capacity that the system cannot use. The battery bank size can be increased to account for losses.

- G. System DC voltage: Each inverter model requires a specific DC voltage to operate.
- H. Battery voltage: Most individual battery voltages are less than the system DC voltage. The batteries may need to be placed in series to deliver the correct voltage.
- I. Capacity: Battery capacity, which is measured in amp-hours, is not usually a fixed number. It is specified based on the rate of discharge. For example, the OutBack EnergyCell 200RE is rated at 154.7 Ahr when discharged at the 5-hour rate (to terminal voltage 1.85 Vpc). This is a high rate of discharge that would hypothetically drain the battery in 5 hours. The same battery is rated at 215.8 Ahr when used at the 100-hour rate. Use the appropriate discharge rate (correlated to the expected loads) to measure the capacity of a battery. Use battery specifications for terminal voltage 1.85 Vpc whenever possible.

**NOTE:** Capacity ratings are for batteries at 25°C. Capacity is reduced at cooler temperatures.

- J. Maximum depth of discharge (DoD): Most batteries cannot be discharged below a certain level without damage. The bank requires enough total capacity to keep this from happening.

**Table 3 Battery Bank Elements**

Item	Source of information
A. Load Size	Site-specific
B. Daily Hours	Site-specific
C. Days of Autonomy	Site-specific
D. Application	Site-specific
E. Conductor Efficiency	Site-specific
F. Inverter Efficiency	Inverter manufacturer
G. System Vdc	Inverter manufacturer
H. Battery Vdc	Battery manufacturer
I. Capacity	Battery manufacturer
J. Maximum DoD	Battery manufacturer

## To Calculate Minimum Battery Bank Size (refer to Table 3 for letter designations):

1. The load size, item A, is measured in watts. Compensate this figure for efficiency loss. Multiply the conductor efficiency by the inverter efficiency (E x F). (These items are represented as percentages, but may be displayed as decimals for calculation.) Divide item A by the result.
2. Convert the compensated load into amperes (Adc). Divide the step 1 result by the system voltage (item G).
3. Determine the daily load consumption in ampere-hours (amp-hours, or Ahr). Multiply the step 2 result by the daily usage hours (item B).
4. Adjust the total for required days of autonomy (the days the system must operate without recharging) and the maximum DoD. Multiply the step 3 result by C and divide by J.

The result is the total amp-hour capacity required for the battery bank.

5. Determine the number of parallel battery strings required. Divide the Ahr figure from step 4 by the individual battery capacity (I). Round the result to the next highest whole number.
6. Determine the total number of batteries required. Divide the system voltage by the battery voltage (G ÷ H). Multiply the result by the step 5 result.

The result is the total required quantity of the chosen battery model.


## EXAMPLE #1

- |   |                          |   |
|---|--------------------------|---|
| A. Backup loads: 1.0 kW (1000 W)                | 1) $A \div [E \times F]$ | $1000 \div (0.98 \times 0.93) = 1097.2 \text{ W}$             |
| B. Hours of use: 8                              | 2) $1 \div G$            | $1097.2 \div 48 = 22.9 \text{ Adc}$                           |
| C. Days of autonomy: 1                          | 3) $2 \times B$          | $22.9 \times 8 = 182.9 \text{ Ahr}$                           |
| D. Grid-interactive system (FXR3048A inverter)  | 4) $[3 \times C] \div J$ | $[182.9 \times 1] \div 0.8 = 228.6 \text{ Ahr}$               |
| E. Conductor efficiency: 98% (0.98)             | 5) $4 \div I$            | $228.6 \div 199.8 = 1.14 \text{ (rounded to 2)}$              |
| F. Inverter efficiency: 93% (0.93)              | 6) $[G \div H] \times 5$ | $[48 \div 12] \times 2 \text{ strings} = 8 \text{ batteries}$ |
| G. System voltage: 48 Vdc                       |                          |   |
| H. Batteries: OutBack EnergyCell 220GH (12 Vdc) |                          |   |
| I. Capacity at 8-hour rate: 199.8 Ahr           |                          |   |
| J. Maximum DoD: 80% (0.8)                       |                          |   |

## EXAMPLE #2

A. Backup loads: 720 W	1) $A \div [E \times F]$	$720 \div (0.97 \times 0.9) = 801.8 \text{ W}$
B. Hours of use: 3	2) $1 \div G$	$824.7 \div 24 = 34.4 \text{ Adc}$
C. Days of autonomy: 2	3) $2 \times B$	$34.4 \times 3 = 103.1 \text{ Ahr}$
D. Off-grid system (VFXR3524A inverter)	4) $[3 \times C] \div J$	$[103.1 \times 2] \div 0.5 = 412.4 \text{ Ahr}$
E. Conductor efficiency: 97% (0.97)	5) $4 \div I$	$412.4 \div 167.5 = 2.5$ (rounded to 3)
F. Inverter efficiency: 92% (0.9)	6) $[G \div H] \times 5$	$[24 \div 12] \times 3 \text{ strings} = 6 \text{ batteries}$
G. System voltage: 24 Vdc		
H. Batteries: OutBack EnergyCell 200RE (12 Vdc)		
I. Capacity at 8-hour rate: 167.5 Ahr		
J. Maximum DoD: 50% (0.5)		

## Generator

- FXR inverters can accept power from a single-phase generator that delivers clean AC power in the range of voltage and frequency specified for that model.
  - ~ Inverters stacked for split-phase output (120/240 Vac) can work with both output lines of a split-phase generator.
  - ~ Inverters stacked for three-phase output can work with three-phase generators.
- The inverter/charger can provide a start signal to control an automatic-start generator. If automatic generator starting is required, the generator must be an electric-start model with automatic choke. It should have two-wire start capability. For other configurations, additional equipment may be required.
- In any configuration, the inverter may need to be specifically programmed using the system display.  Perform all programming according to the specifications of the generator and the required operation of the inverter. Parameters to be programmed may include generator size, automatic starting requirements, and potential fluctuations in generator AC voltage.
- A generator that is to be installed in a building usually should **not** have a bond between the neutral and ground connections. The generator should only be bonded if there is a specific need. Installations in North America are expected to bond the neutral and ground at the main electrical panel. See page 18 for more information on neutral-ground bonding.

## Generator Sizing

A generator should be sized to provide enough power for all the loads and the battery charger. The generator size should assume maximum loads and maximum charging at the same time.

- Available generator power may be limited by ratings for circuit breakers and/or generator connectors.
- The generator must be able to provide current to all inverters on a given phase or leg. Minimum generator size<sup>2</sup> is usually recommended to be twice the power of the inverter system. For example, a 2 kVA inverter should have a 4 kVA generator. Many generators may not be able to maintain AC voltage or frequency for long periods of time if they are loaded more than 80% of rated capacity.
- In addition, if a split-phase 120/240 Vac generator is powering a single-phase 120 Vac inverter system with no other compensation, it is **required** to be at least twice the power of the inverters. A split-phase generator that is heavily loaded on one output line may suffer severely from balancing issues. The OutBack FW-X240 or PSX-240 balancing transformers may compensate for this condition.

<sup>2</sup> This is the generator size after derating for environment, use, and other factors.

## Planning

NOTES:



# Installation

## Location and Environmental Requirements

Sealed (FXR) models are resistant to water and other elements but are not designed for permanent outdoor installations. If outdoor installation is required, the FXR inverter must be installed under cover and protected from direct exposure to the environment. Vented (VFXR) models are not resistant to water and other elements. They must be installed indoors.

- The inverter can often be mounted in any position or orientation. If there is any exposure to moisture or condensation, the inverter must not be mounted upside-down. This ensures that water will not accumulate under the DC cover. However, it can still be mounted in other positions or orientations.
- For installations where the inverter may be exposed to water spray, a sealed model must be used and mounted either with the base down (shelf mounting) or with the AC wiring compartment facing down (wall mounting). If mounted with the base down, water cannot be allowed to accumulate around the inverter's base. There is a drainage system on the base of the inverter to dispel condensation. If submerged, water can enter this drain and cause failure.
- Vented inverters must be installed in a weather-proof enclosure or enclosed area. These models are not designed for exposure to water or excessive wind-blown dust and debris.
- When inverters are installed with an OutBack FLEXpower system, the system must be installed in the upright orientation due to the requirements of the circuit breakers.
- Any inverter will perform more efficiently in locations offering plenty of air circulation. The recommended minimum clearance is 2 inches (5 cm) on all sides of the inverter.
- Any inverter will function to all of its specifications if operated in a range of  $-4^{\circ}\text{F}$  to  $122^{\circ}\text{F}$  ( $-20^{\circ}\text{C}$  to  $50^{\circ}\text{C}$ ).
- The inverter will function, but will not necessarily meet its specifications, if operated in a temperature range of  $-40^{\circ}\text{F}$  to  $140^{\circ}\text{F}$  ( $-40^{\circ}\text{C}$  to  $60^{\circ}\text{C}$ ). This is also the allowable temperature range for storage.
- The FXR series of inverters carry an Ingress Protection (IP) rating of 20 and a Relative Humidity (RH) rating of 93% (non-condensing).
- Inverter specifications are listed in the *FXR Series Inverter/Charger Operator's Manual*.

## Tools Required

- Wire cutters/strippers
- Torque wrenches
- Assorted insulated screwdrivers
- DVM or standard voltmeter

### Mounting

- One person can install the FXR inverter, but installation may be easier with two people.
- The unit has four mounting holes, one in each corner. Use fasteners in all corners for a secure installation.


**IMPORTANT:**

Use correct fasteners to secure the inverter to the mounting surface, regardless of the type of surface. OutBack cannot be responsible for damage to the product if it is attached with inadequate fasteners.

- Due to the variance in other mounting methods, OutBack only endorses the use of FLEXware mounting products or previous versions of OutBack mounting plates. Use M6 x 20 mm machine screws, one per corner, to attach the inverter to the mounting plate. Follow the instructions with each mounting system.
- Mount and secure each component before attaching any wiring.
- When the inverter is used with other metal chassis, make sure that all chassis are grounded appropriately. (See the grounding instructions on page 18.) Grounding other chassis may involve metal-to-metal contact, or separate ground wires.

If using an OutBack FLEXware Mounting Plate, avoid large air gaps behind the plate. These can result in louder mechanical noise during heavy inverting or charging. Mount the plate on a flat, solid mounting surface.


### Dimensions

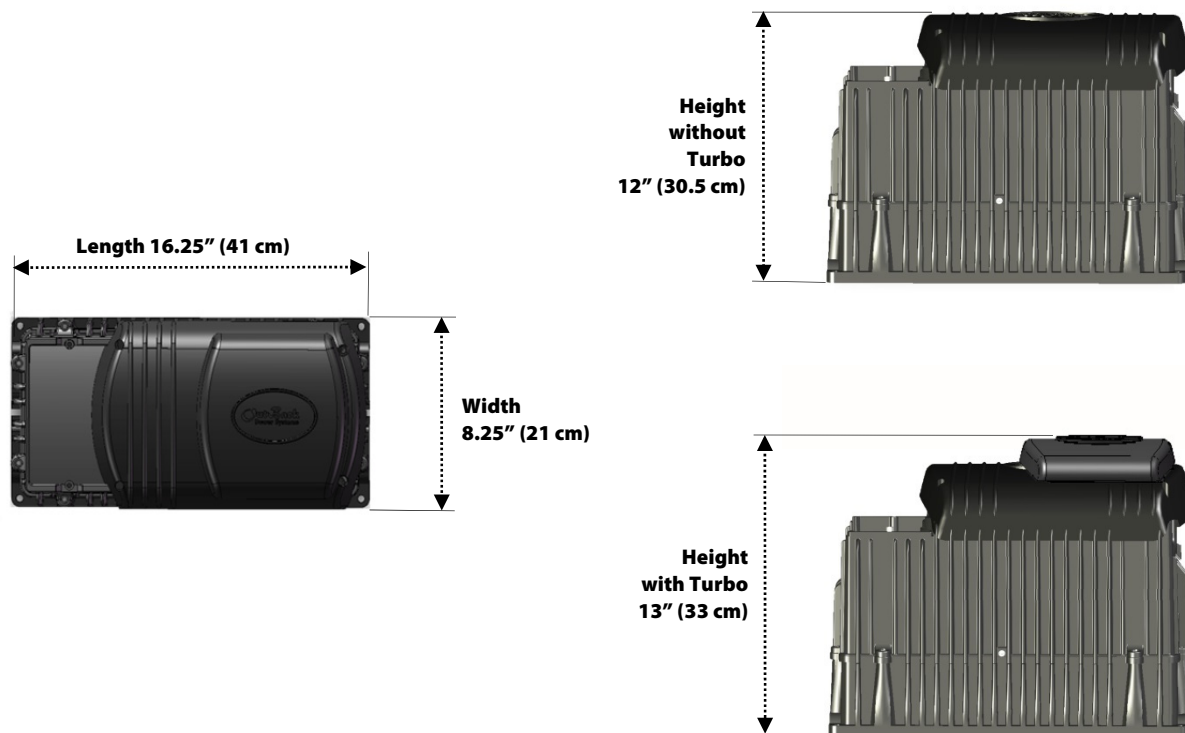

**Figure 4**      **Dimensions**



# Terminals and Ports

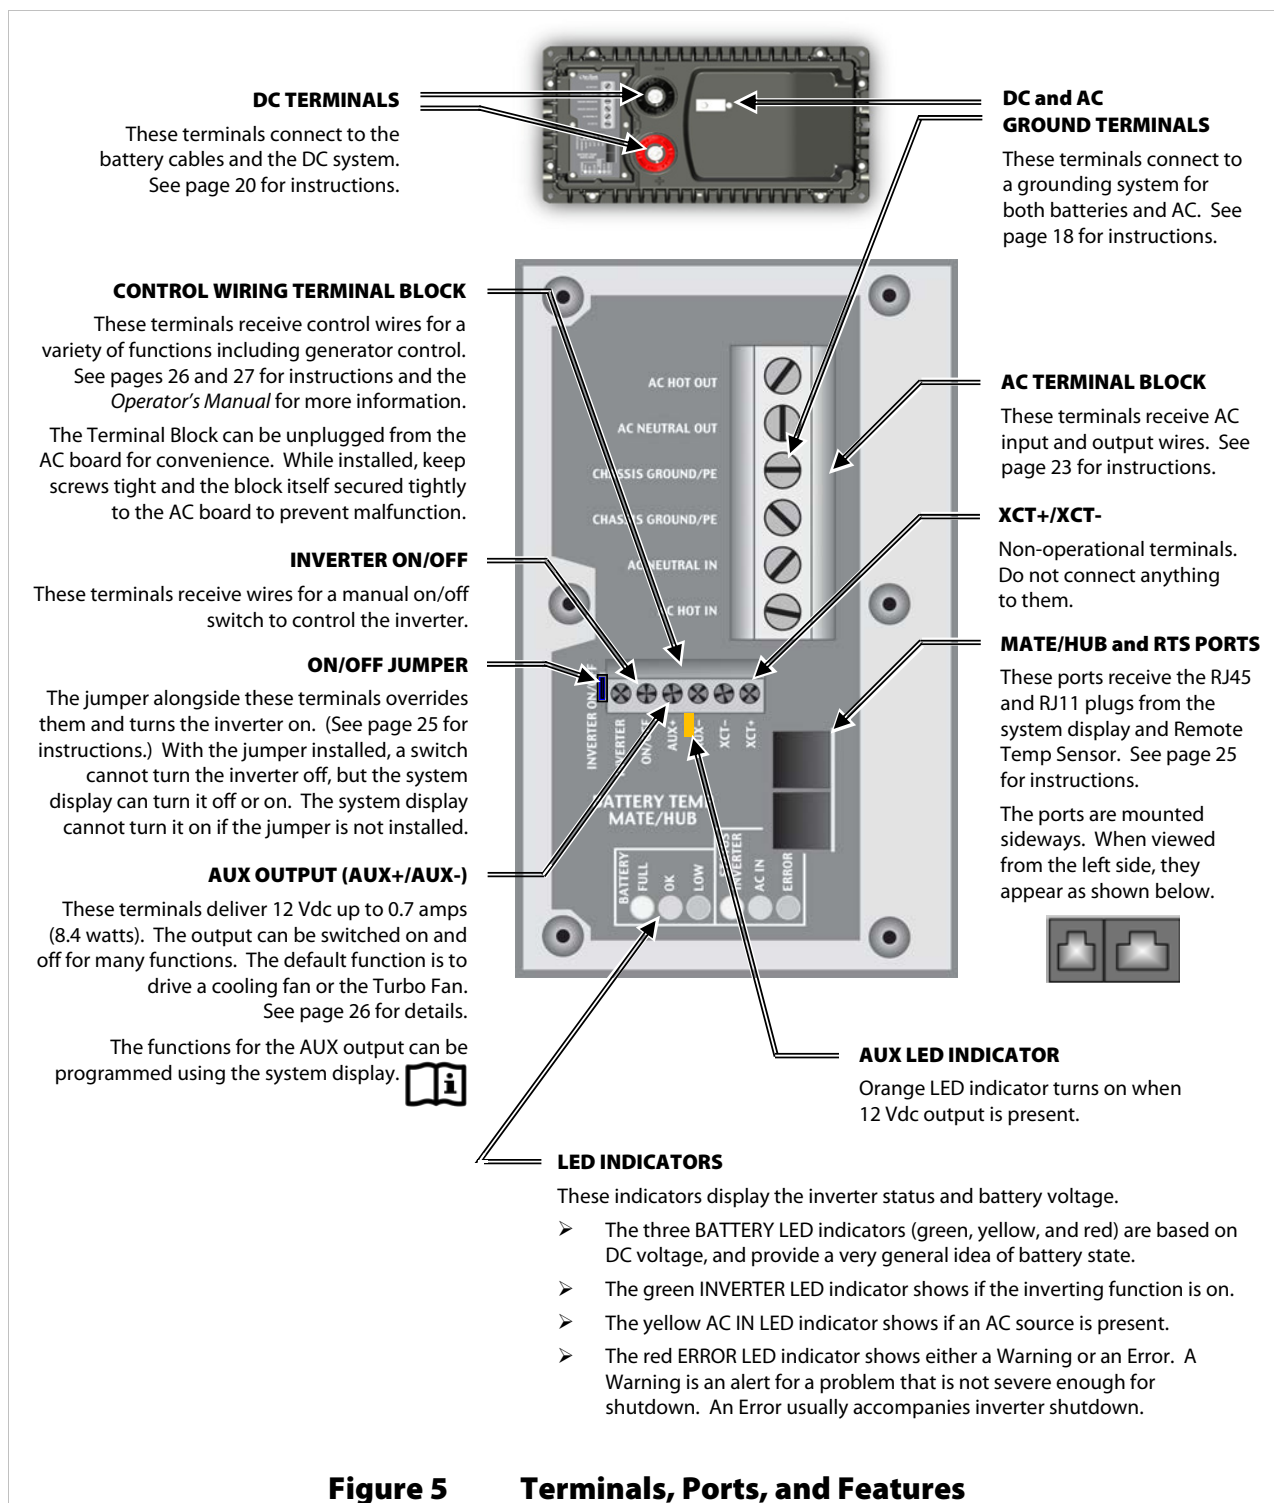

**Figure 5** Terminals, Ports, and Features

**NOTE:** The INVERTER ON/OFF Jumper is installed to the ON position during manufacture, but the FXR inverter is given an external OFF command at the same time. Its initial state is OFF.

## Wiring

It will be necessary to remove knockouts from the AC Plate to run wires. The AC Plate has one knockout of ½" size and two knockouts of ¾" size. Install appropriate bushings to protect the wires.

Use copper wire only. Wire must be rated at 75°C or higher.

## Grounding



### WARNING: Shock Hazard

- This unit meets the IEC requirements of Protection Class I.
- The unit must be connected to a permanent wiring system that is grounded according to the IEC 60364 TN standard.
- The input and output circuits are isolated from ground. The installer is responsible for system grounding according to all applicable codes.
- For safety, the neutral and ground conductors should be mechanically bonded. OutBack does not bond these conductors within the inverter. Some codes require the bond to be made at the main panel only. Make sure that no more than one bond is present in the AC system at any time.



### WARNING: Shock Hazard

For all installations, the negative battery conductor should be bonded to the grounding system at only one point. If the OutBack GFDI is present, it can provide the bond.



### IMPORTANT:


Not all OutBack products can be used in a positive-ground system. If it is necessary to build a positive-ground system with OutBack products, contact OutBack Technical Support at **+1.360.618.4363** before proceeding. Additionally, consult the online forum at [www.outbackpower.com/forum/](http://www.outbackpower.com/forum/), where this subject has been discussed extensively.

**Table 4 Ground Conductor Size and Torque Requirements**


Terminal Location	Minimum Conductor Size	Torque Requirements
Central AC Terminals	#10 AWG (0.009 in <sup>2</sup> ) or 6 mm <sup>2</sup>	25 in-lb (2.8 Nm)
DC Box Lug	#6 AWG (0.025 in <sup>2</sup> ) or 16 mm <sup>2</sup>	45 in-lb (5.1 Nm)

Table 4 contains OutBack's recommendations for minimum safe cable sizes. Other codes may supersede OutBack's recommendations. Consult applicable codes for final size requirements.

The inverter's DC ground is a box lug located next to the negative DC battery terminal. This lug accepts up to 1/0 AWG (70 mm<sup>2</sup> or 0.109 in<sup>2</sup>) wire. Local codes or regulations may require the DC ground to be run separately from the AC ground. Also, if present, it will be necessary to remove the DC Cover or Turbo Fan before making the ground connection. (See page 22.)

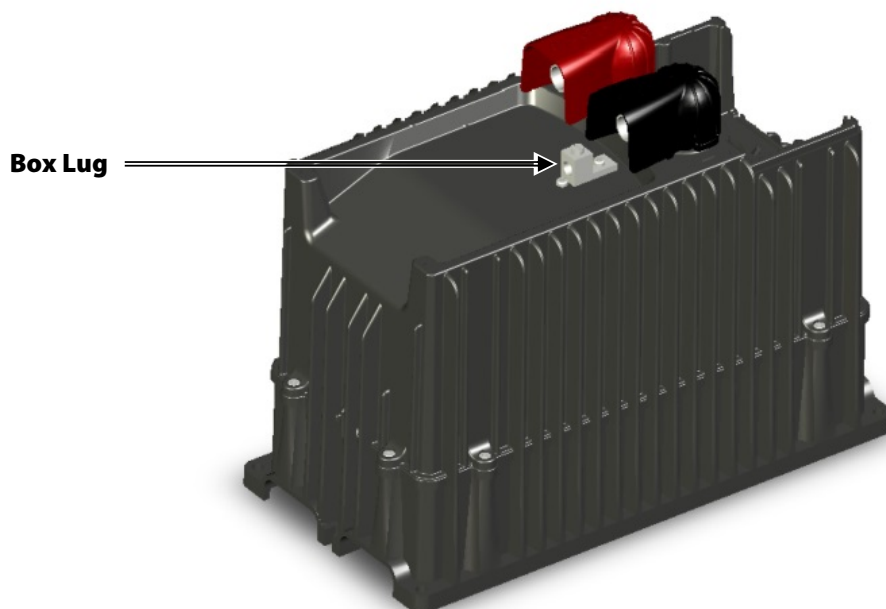

**Figure 6 DC Ground Lug**

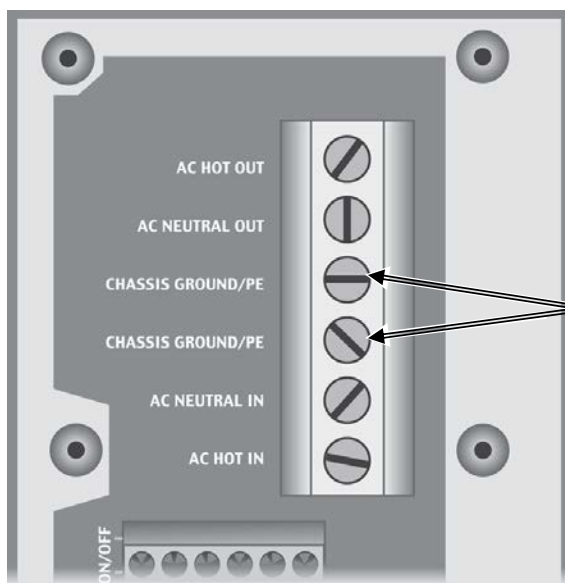





## CHASSIS GROUND/PE

The two CHASSIS GROUND/PE terminals are electrically common. If connecting to an external ground bus, only one terminal needs to be used. The other terminal may be used if connecting to a device with its own ground wire, such as a generator.

**Figure 7 Chassis Ground/PE**

## DC Wiring

	<b>WARNING: Shock Hazard</b> Use caution when working in the vicinity of the inverter's battery terminals.
	<b>CAUTION: Equipment Damage</b> Never reverse the polarity of the battery cables. Always ensure correct polarity.
	<b>CAUTION: Fire Hazard</b> <ul style="list-style-type: none"> <li>➤ The installer is responsible for providing overcurrent protection. Install a circuit breaker or overcurrent device on each DC positive (+) conductor to protect the DC system.</li> <li>➤ Never install extra washers or hardware between the mounting surface and the battery cable lug. The decreased surface area can build up heat. See the hardware diagram on page 21.</li> </ul>
	<b>IMPORTANT:</b> <ul style="list-style-type: none"> <li>➤ The DC terminals must be encased in an enclosure to meet the requirements of some local or national codes.</li> <li>➤ Table 5 contains OutBack's recommendations for minimum safe cable sizes. Other codes may supersede OutBack's recommendations. Consult applicable codes for final size requirements.</li> </ul>

**Table 5 DC Conductor Size and Torque Requirements**

Inverter (Wattage/Voltage)	Nominal DC Amps (Derated 125%)	Conductor Size <sup>3</sup> (Minimum)	Breaker Size (Minimum)
FXR2012A	200	4/0 AWG (120 mm <sup>2</sup> ) or 0.186 in <sup>2</sup>	250 Adc
VFXR2812A	280	4/0 AWG (120 mm <sup>2</sup> ) or 0.186 in <sup>2</sup>	250 Adc
FXR2524A	125	2/0 AWG (70 mm <sup>2</sup> ) or 0.109 in <sup>2</sup>	175 Adc
VFXR3524A	175	4/0 AWG (120 mm <sup>2</sup> ) or 0.186 in <sup>2</sup>	250 Adc
FXR3048A	75	1/0 AWG (70 mm <sup>2</sup> ) or 0.109 in <sup>2</sup>	125 Adc
VFXR3648A	90	1/0 AWG (70 mm <sup>2</sup> ) or 0.109 in <sup>2</sup>	125 Adc
Terminal Location		Torque Requirements	
Inverter DC Terminals		60 in-lb (6.9 Nm)	
Battery Terminals		See battery manufacturer's recommendations	

### When installing DC cables:

- Battery positive and negative cables should be no longer than 10 feet (3 meters) each, to minimize voltage loss and other possible effects.
- Turn off DC circuit breakers or remove fuses before proceeding.
- Tie, tape, or twist cables together to reduce self-inductance. Run positive and negative cables through the same knockouts and conduit.
- The inverter's battery terminal is a threaded stud which accepts a ring terminal lug. Use crimped and sealed copper ring lugs with 5/16 inch (0.79 cm) holes, or use compression lugs.
- Install all overcurrent devices on the positive cable.


<sup>3</sup> Cable sizes are for each inverter in a system. In a system with multiple inverters, each inverter requires its own cables and overcurrent devices of the size indicated.

## To install DC cables and hardware:

1. Install all DC cables.

Do not install hardware in a different order from Figure 8. The battery cable lug should be the first item installed on the stud. It should make solid contact with the mounting surface.

Do not close the main DC disconnect until wiring is complete and the system is prepared for commissioning.

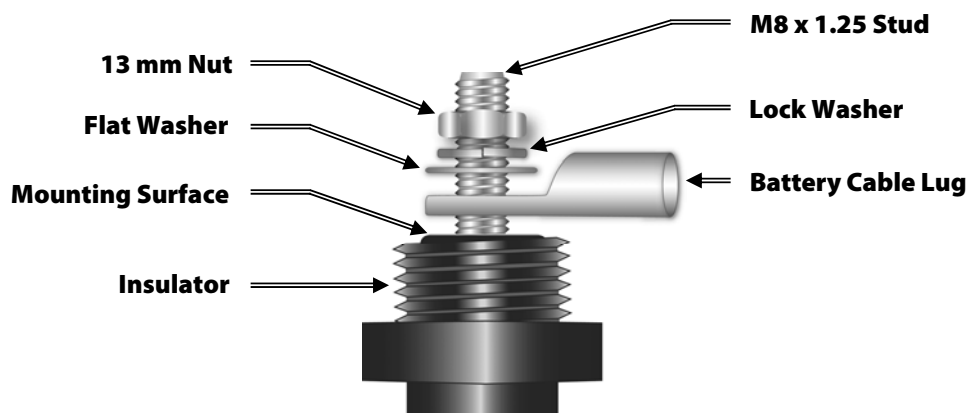


**Figure 8 Required Order of Battery Cable Hardware**



### CAUTION: Fire Hazard


Never install extra washers or hardware between the mounting surface and the battery cable lug. The decreased surface area can build up heat.

2. Install the battery terminal covers. These are made of stiff plastic with a snap-on design.

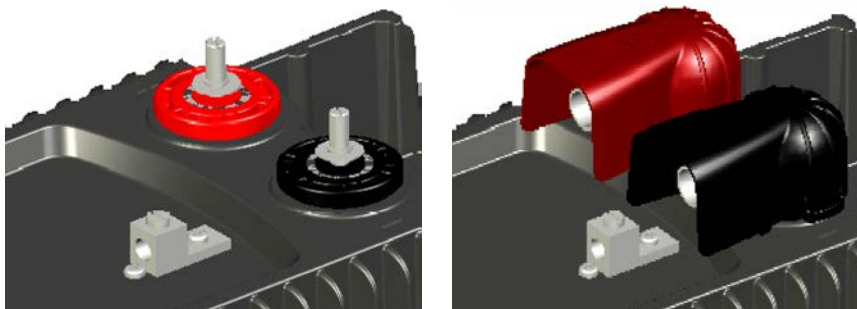


### REMOVAL SLOT

If it is necessary to remove the covers, remove carefully using a flat screwdriver. Insert the screwdriver into the slot on the side of each cover and unsnap the cover.

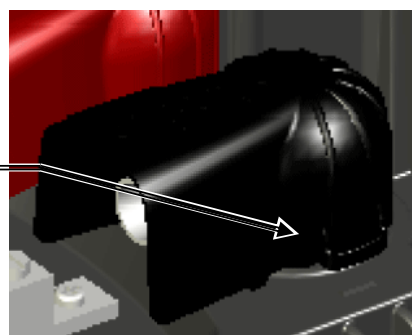

**Figure 9 Battery Terminal Covers**

## DC Cover or Turbo Fan Attachment

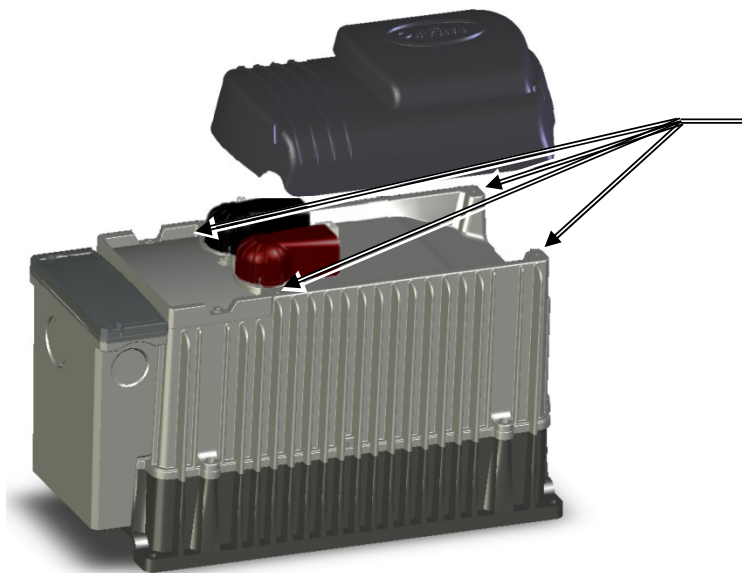

### COVER ATTACHMENT

FXR inverters are equipped with either the DC Cover or the Turbo Fan. To attach either cover, put the cover in place and insert a screw at each corner using a Phillips screwdriver.


As part of attaching the Turbo Fan, follow the wiring instructions in Figure 11.

**Figure 10 DC Cover Attachment**


### TURBO FAN WIRING


Install the wires in the AC Wiring Compartment to make the Turbo Fan operational. The AUX+ and AUX- terminals receive the red (+) and black (-) wires. Tighten with a Phillips screwdriver.

To safely run the wires into the AC compartment, pass the wires through the notch in the compartment cover.

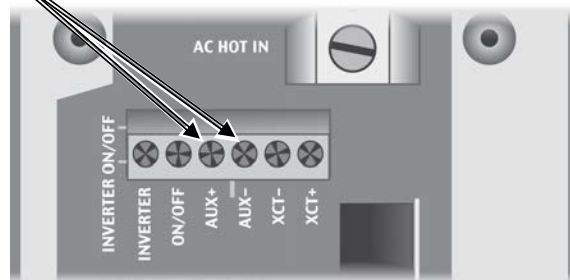

If necessary, the green terminal block can be unplugged by pulling it gently away from the AC board.

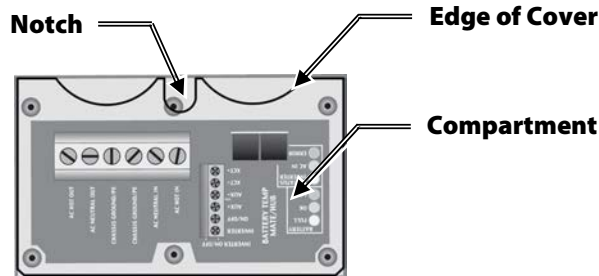





Make certain the AUX programming is correct for proper fan operation. 

**Figure 11 Turbo Fan Wiring**

### If it is necessary to remove the Turbo Fan:


1. Remove the compartment cover.
2. Unscrew the AUX+ and AUX- terminal screws.
3. Remove the wires.
4. Remove the screws at the four corners of the Turbo Fan.
5. Remove the Turbo Fan.

# AC Wiring

	<b>WARNING: Shock Hazard</b> <ul style="list-style-type: none"> <li>➤ The neutral and ground conductors should be mechanically bonded. Ensure there is no more than one AC neutral-ground bond at any time.</li> <li>➤ Local or national codes may require the bond to be made at the main panel only.</li> </ul>
	<b>IMPORTANT:</b> The AC input and output may need to be protected with branch-rated circuit breakers of maximum 60 Aac size to meet applicable code requirements.
	<b>IMPORTANT:</b> Applicable codes may prevent grid-interactive inverters from using an input circuit breaker larger than 40 amps. Confirm local requirements before installation.
	<b>IMPORTANT:</b> This page contains OutBack's recommendations for minimum safe cable sizes. Other codes may supersede OutBack's recommendations. Consult applicable codes for final size requirements.

All system wiring must comply with national and local codes and regulations.

The FXR inverter's AC terminal block has six positions for AC wires. The minimum recommended size is #6 AWG (16 mm<sup>2</sup>) or 0.021 in<sup>2</sup> wire. This is also the largest size that the terminal will accept.

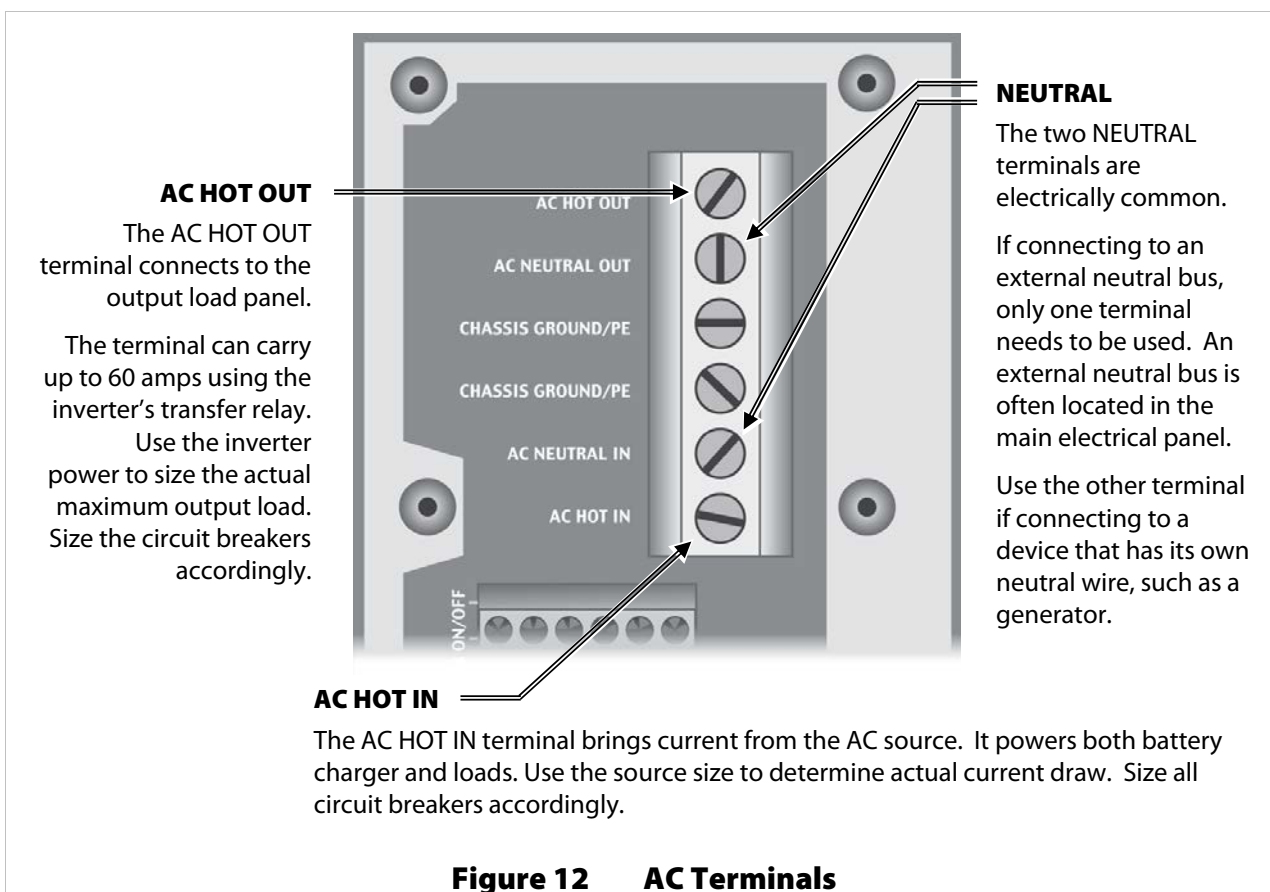


**Figure 12 AC Terminals**




## AC Sources

The inverter has a single set of AC terminals which are intended to connect to a single AC source. **It cannot be directly wired to more than one AC source at the same time.** If multiple sources are used, it is usually required to have a selector switch that changes from one to the next. The switch should be the “break before make” type which disconnects from one source before contacting another. This prevents the risk of connecting to two out-of-phase sources at the same time or connecting them to each other.

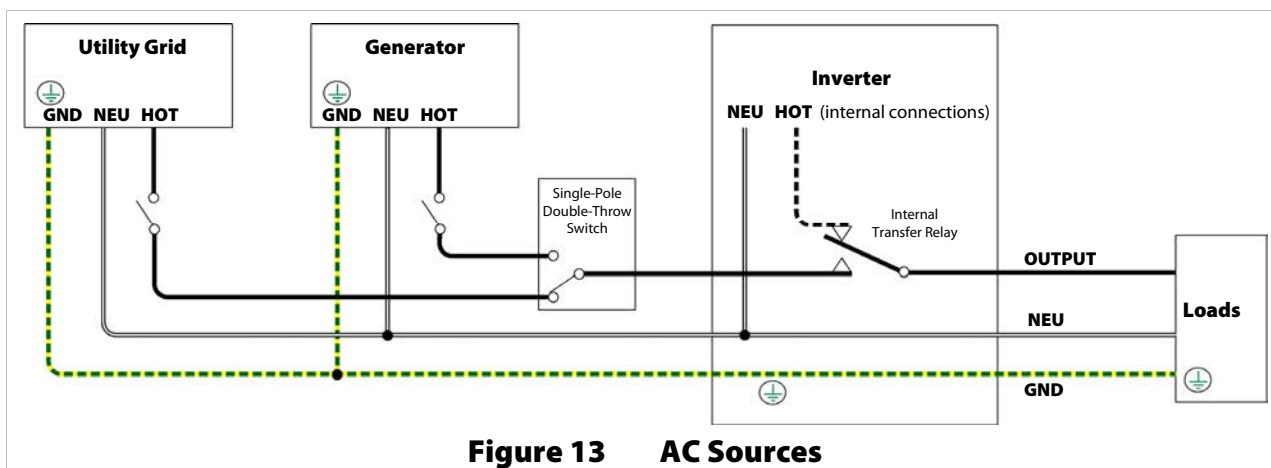

The inverter’s transfer relay is normally set to provide inverter power to the output. This is shown in Figure 13, where the internal transfer relay is switched to the inverter function.

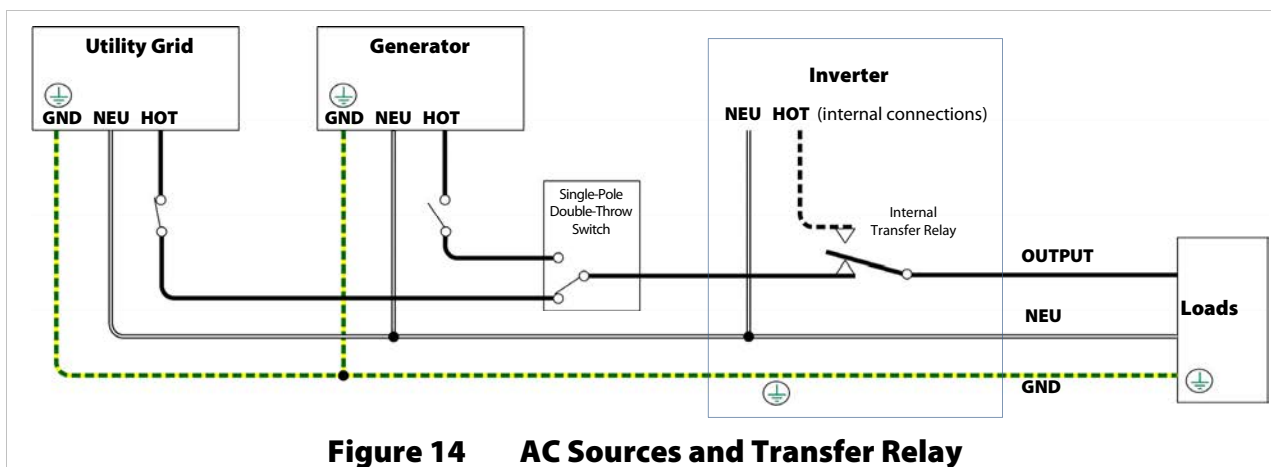


When an AC source is connected and accepted, the internal transfer relay switches to transfer the AC source power to the loads. Figure 14 shows the utility grid switch closed. The internal transfer relay has switched accordingly so that the loads receive utility power. (See the *Operator’s Manual* for the inverter’s acceptance criteria.)




## ON and OFF Wiring

The INVERTER ON/OFF jumper bridges two pins. The ON/OFF jumper parallels the two INVERTER ON/OFF terminals on the Control Wiring Terminal Block. If either connection is closed, the inverter is ON. The jumper is installed in the factory, but the inverter is given an external OFF command at the same time. Its initial state will be OFF. (An inverter in the OFF state will not invert. However, it may still transfer power to loads and charge batteries from an AC source.)

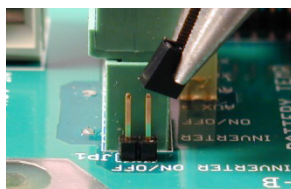

**Jumper Off**

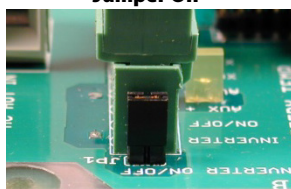


**Jumper On**

To turn the inverter initially ON, remove the jumper briefly and then replace it. This requires long-nose pliers or a similar tool.

After this, removing the jumper will immediately turn the inverter OFF.



Once the jumper has been removed, the INVERTER ON/OFF terminals on the Control Wiring Terminal Block can be used to wire a manual on/off switch. These terminals can also be used to control an Emergency Power Off (EPO) device instead of a standard switch.

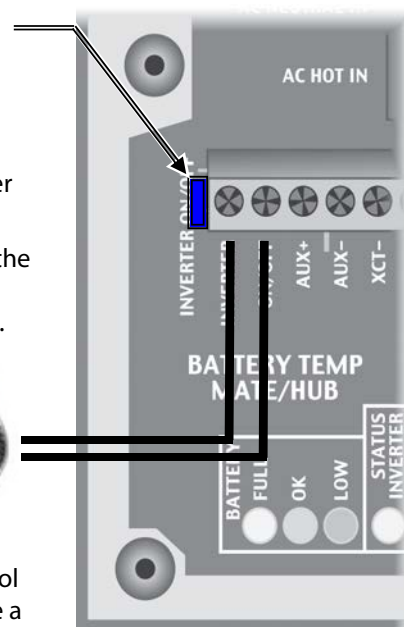

**Figure 15 ON/OFF Jumper and Connections**


## Accessory Wiring

The AC Wiring Compartment Board has ports for both the Remote Temperature Sensor (RTS) and the system display. The system display port is labeled MATE/HUB. If a HUB Communications Manager is in use, it occupies the inverter's MATE/HUB port.

**RTS cable**  
RJ11,  
4-conductor,  
telephone)



**MATE cable**  
RJ45, 8-conductor,  
CAT5 non-crossover

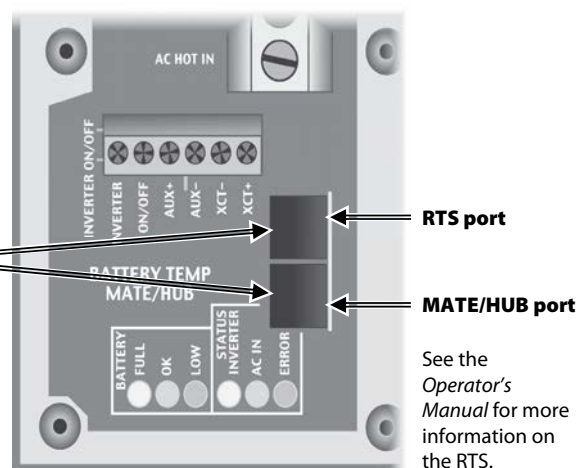

Additional ports

MATE  
port

When a HUB product occupies the inverter's MATE/HUB port, the system display connects directly to the HUB product.

Inverters plug into ports 1 and above. Charge controllers and other devices plug into unassigned ports not used by inverters.

See Stacking on page 30 for information on connecting inverters. See the HUB product literature for other devices.

**Figure 16 Accessory Connections**



## AUX Wiring

The **AUX+** and **AUX-** terminals are a switched 12 Vdc supply. The **AUX** can respond to different criteria and control many functions. These include cooling fans, vent fans, load diversion, fault alarms, and the **Advanced Generator Start** (AGS) function.

The terminals can supply up to 0.7 amps at 12 Vdc (8.4 watts). This is sufficient to drive a small fan or a relay controlling a larger device. The terminals accept wire up to #14 AWG (2.5 mm<sup>2</sup>). The **AUX** circuit contains electronic overcurrent protection, which resets after being overloaded. No additional fuses are required for the **AUX** terminals.

The default setting for the **AUX** output is to control the Turbo Fan included with sealed models. (See Figure 17.) The **AUX** output can only control one function at a time. It cannot be used for anything else if the Turbo Fan is connected.

The control logic for the **AUX** output is not always located in the same device. Inverter **AUX** functions are located within the inverter itself and are described accordingly. Although inverter-based functions require the system display for programming, they will function even if the display is removed. However, AGS programming is located within the system display and will not work if the display is removed. Other devices may also be able to control the terminals. For generator control, see page 27.

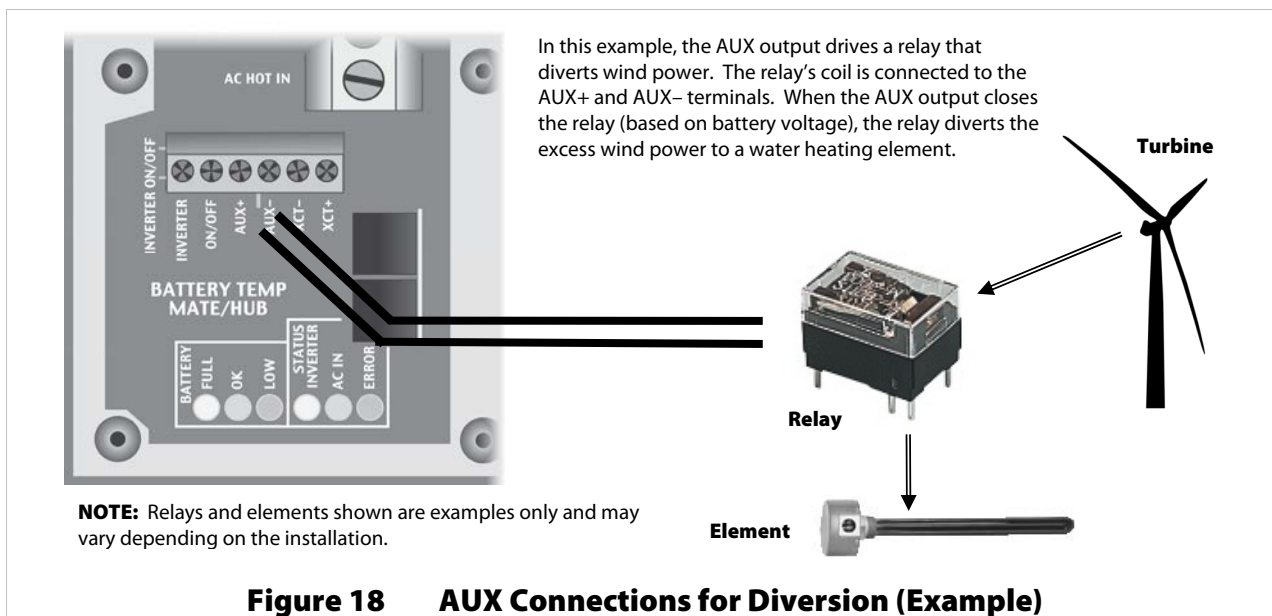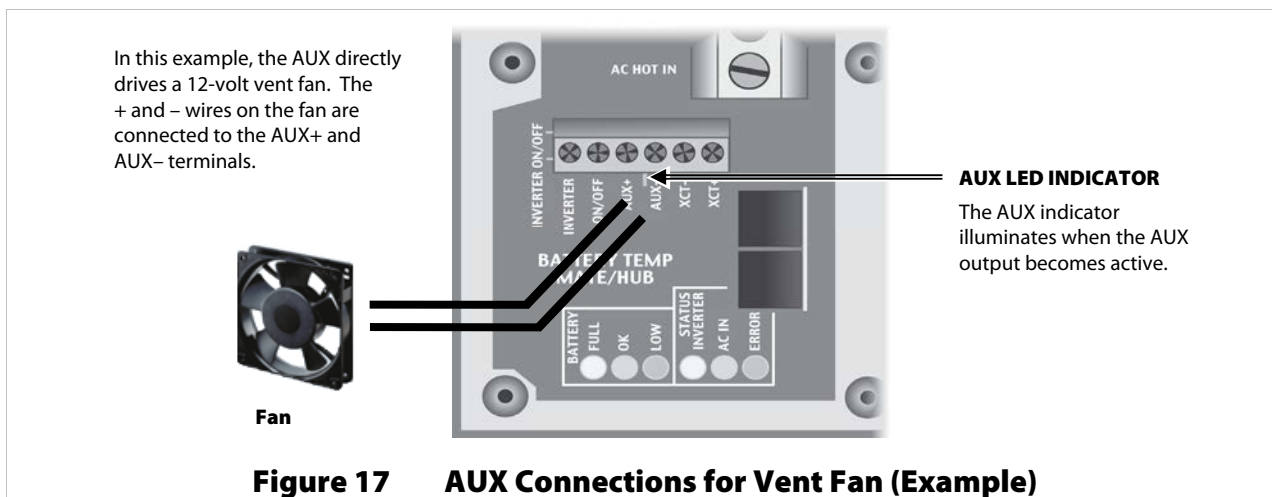

## Generator Control

The AUX terminals can provide a signal to control an automatic-start generator. The control function can be **Advanced Generator Start** (AGS), which is situated in the system display. AGS can start the generator using settings from the system display, or it can use battery readings from the FLEXnet DC battery monitor. Alternately, the control function can be **Gen Alert**, which is a simpler function based directly in the FXR inverter. The choice of control function depends on system needs and the capabilities of each device.


The generator must be an electric-start model with automatic choke. It is recommended to have “two-wire” start capability. A two-wire-start generator is the simplest type, where the cranking and starting routine is automated. It usually has a single switch with two positions that is turned ON to start, OFF to stop.

### Two-Wire-Start

The 12 Vdc signal provided by the **AUX** output can be switched on and off to provide a start signal. It is possible to send a 12-Vdc signal directly to the generator. However, this should never be done if it connects the **AUX** output directly to the generator’s own battery. It is more common to use the **AUX** terminals to energize the coil of a 12 Vdc automotive or similar relay.

The OutBack FLEXware Relay Assembly depicted in Figure 19 is sold for this purpose. The relay contacts can serve in place of the generator’s start switch. The battery shown below is depicted for clarity. In most cases, it is part of the generator’s internal starting circuit and is not an external component.

The drawing below is one example of a possible arrangement. Specific arrangements, relays, and other elements depend on the requirements of the installation and of the generator.

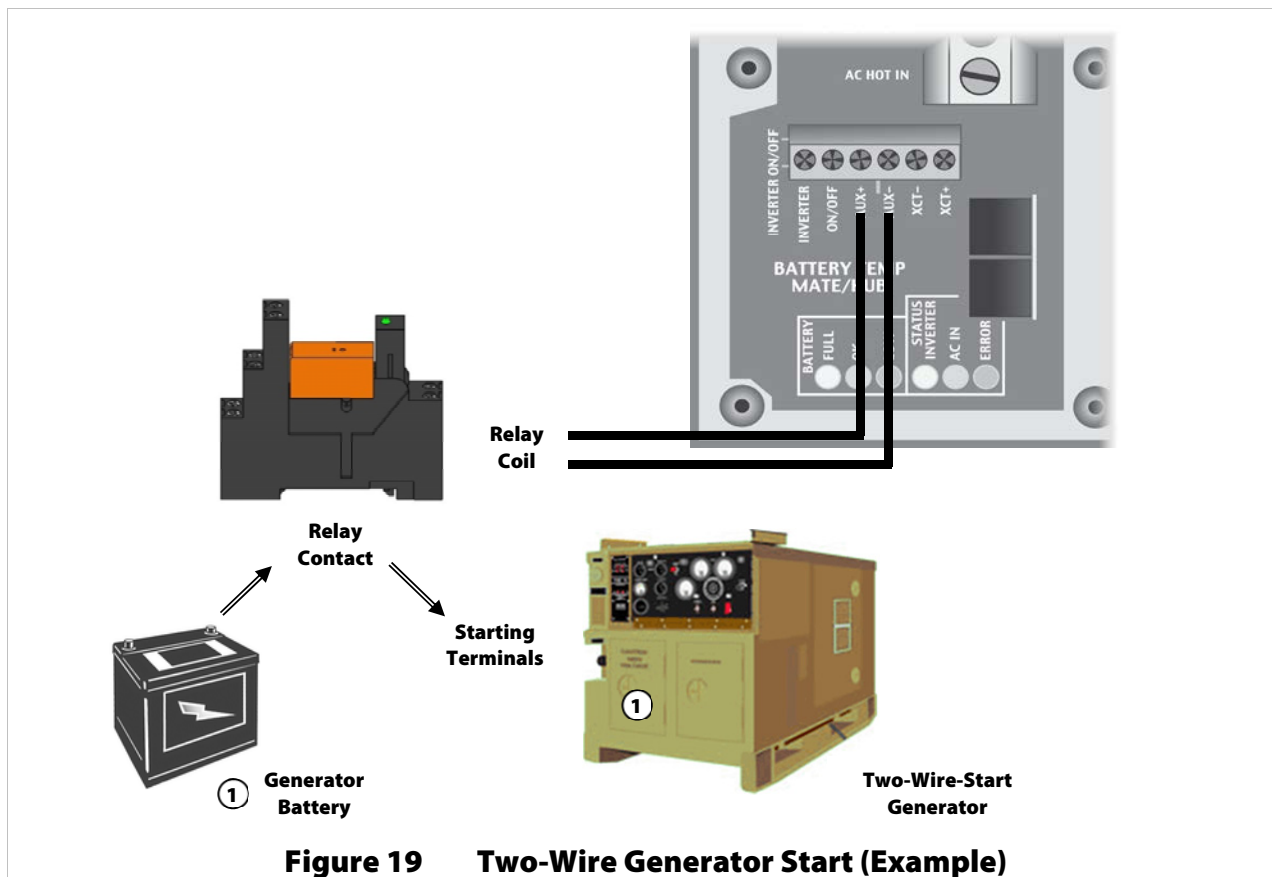


## Installation

### Three-Wire-Start

A “three-wire-start” generator has two or more starting circuits. It usually has a separate switch or position for cranking the generator. A three-wire generator has fewer automated functions than a two-wire. It usually requires multiple controls for starting, running, or stopping. The AUX terminals cannot control this type of generator without using a three-wire to two-wire conversion kit.

Atkinson Electronics (<http://atkinstonelectronics.com>) is one company that makes these kits. The Atkinson GSCM-Mini is intended to work with OutBack inverters.

The drawing below is one example of a possible arrangement. Specific arrangements, relays, and other elements depend on the requirements of the installation and of the generator.

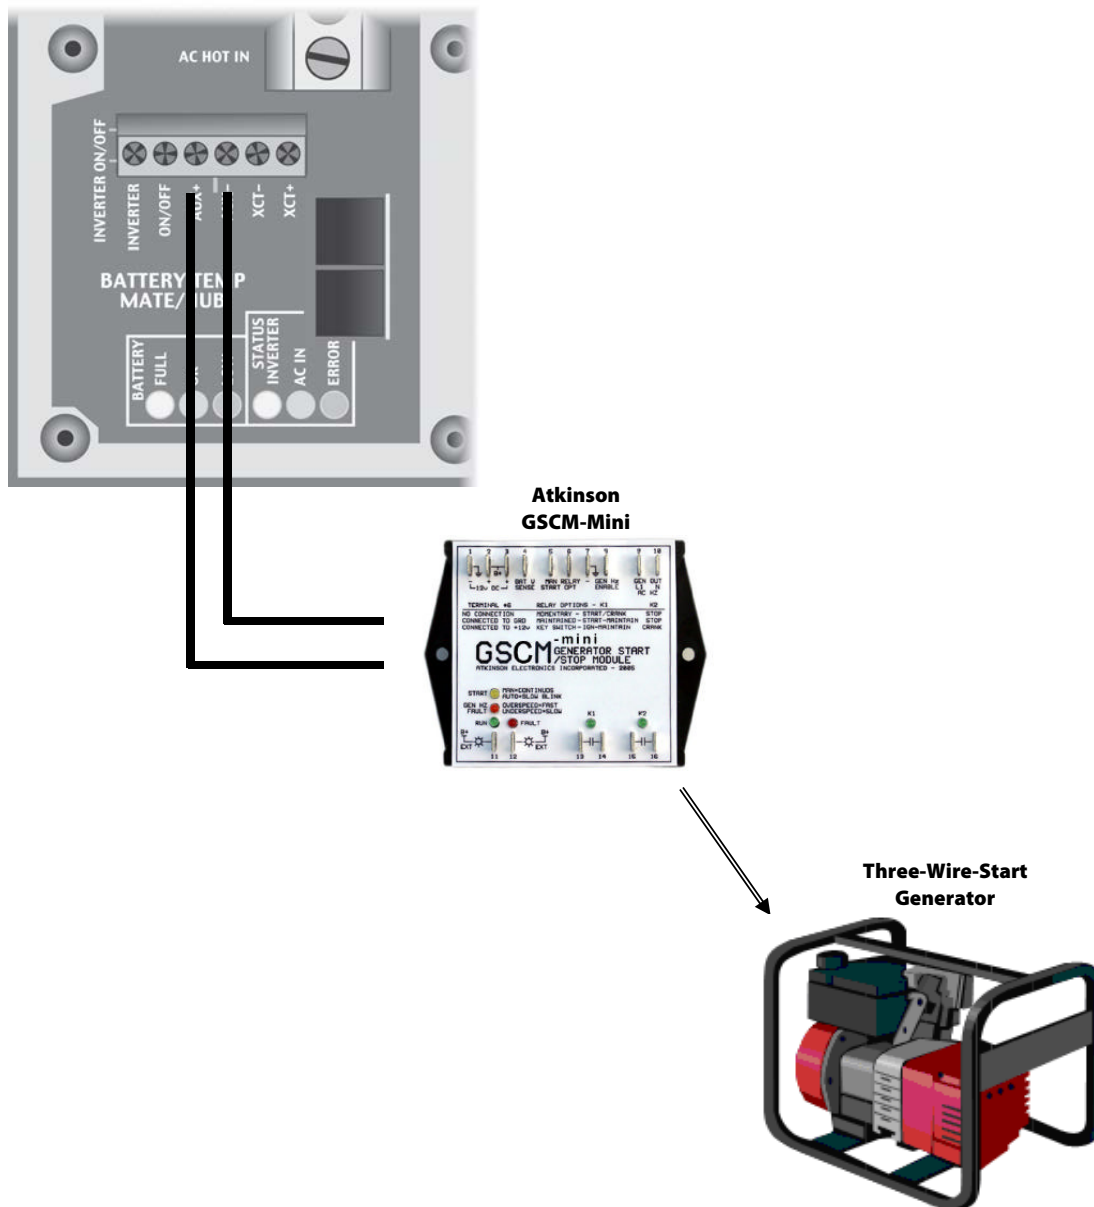


**Figure 20 Three-Wire Generator Start (Example)**

# AC Configurations

## Single-Inverter

When installing an inverter AC system, the following rules must be observed.

- All overcurrent devices must be sized for 60 Aac or less.
- All wiring must be sized for 60 Aac or more.
- All output circuit breakers must be sized appropriately for loads and inverter power.
- The AC input (generator or utility grid) must be a single-phase source of the proper voltage and frequency.

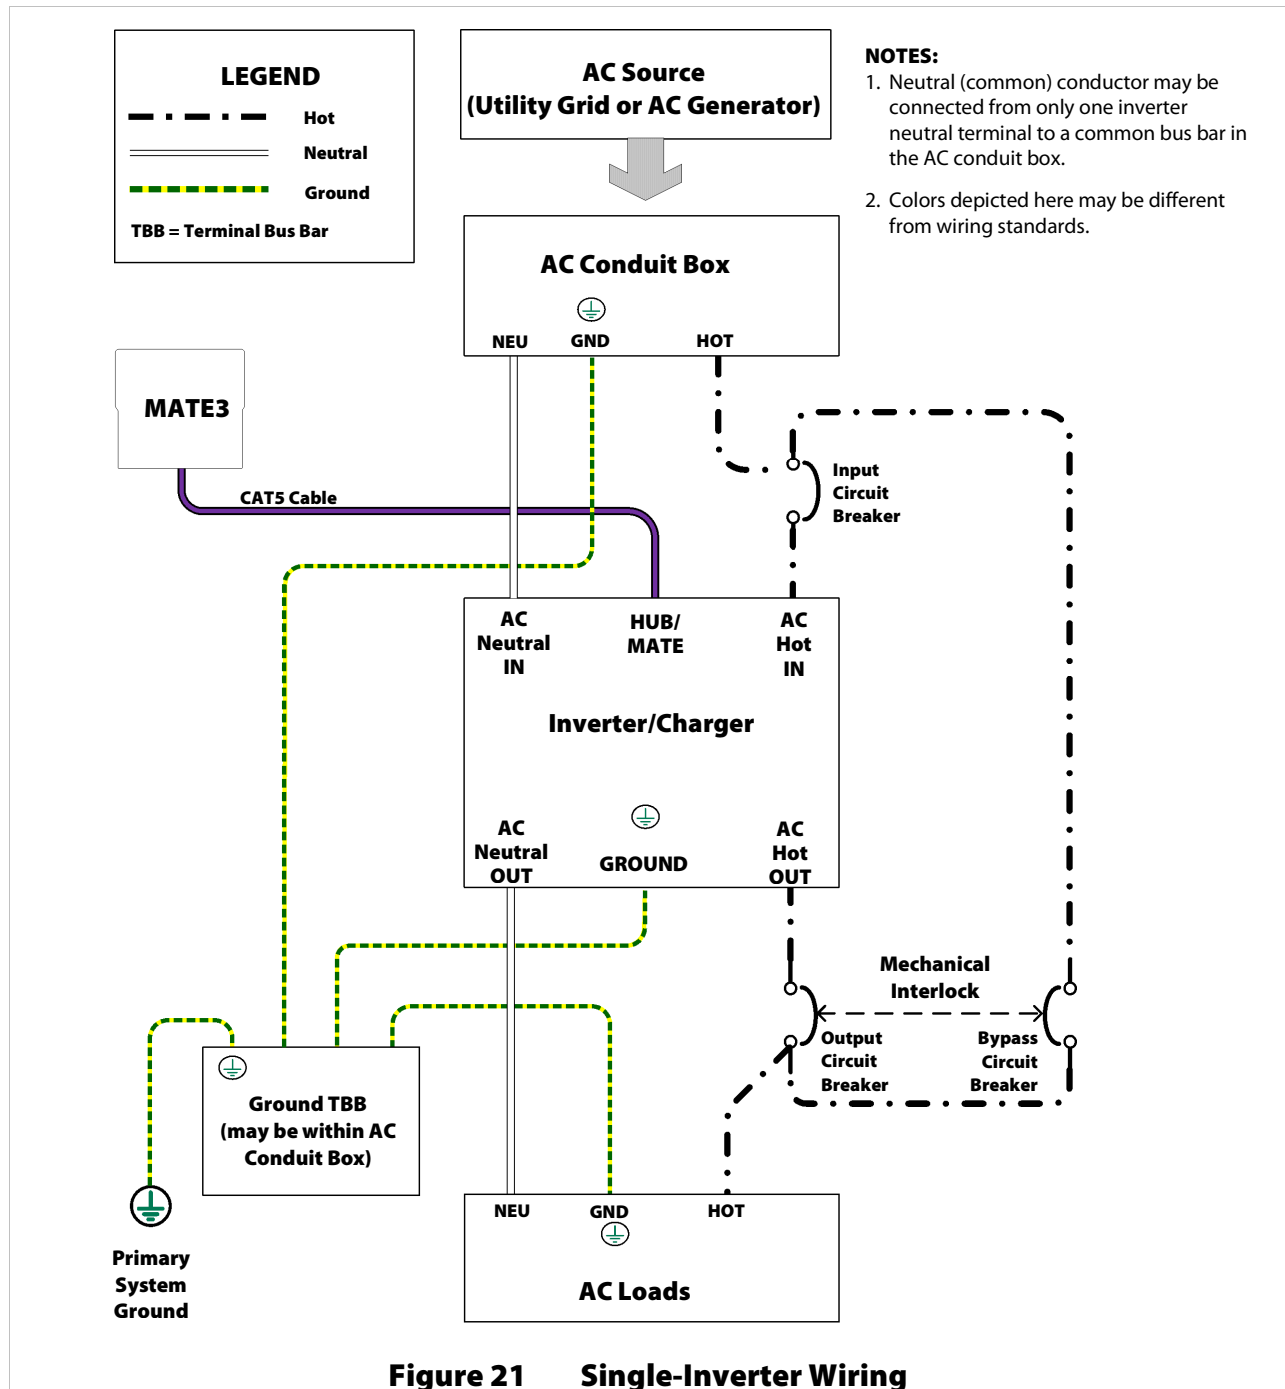


### Multiple-Inverter AC Installations (Stacking)

Installing multiple inverters in a single AC system allows larger loads than a single inverter can handle. This requires stacking. Stacking inverters refers to how they are wired within the system and then programmed to coordinate activity. Stacking allows all units to work together as a single system. Examples of stacking configurations include “series”, “parallel”, “series/parallel”, and “three-phase”.

#### Stacking Connections

Stacking requires an OutBack HUB10.3 communications manager and a system display. Make all interconnections between the products with CAT5 non-crossover cable.

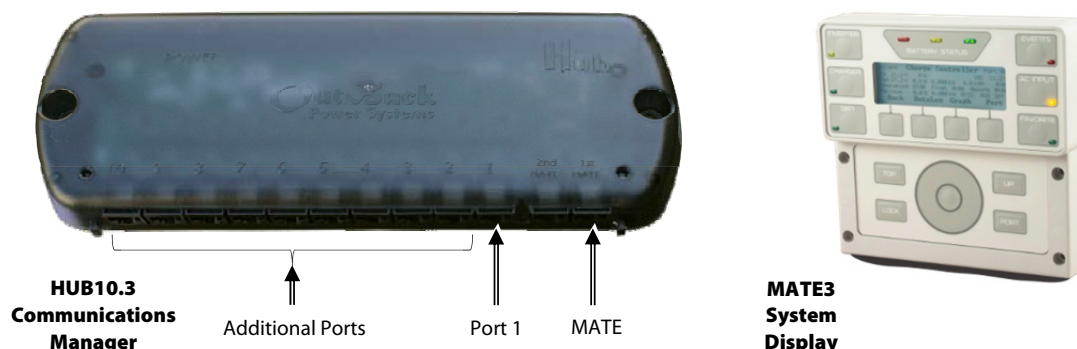

**Figure 22 OutBack HUB10.3 and MATE3**

Each inverter must be assigned a stacking mode, “master” or “slave”, depending on the configuration.

- The master provides the primary output phase. Other inverters in the system base their phase on that of the master. If the master shuts off, all other inverters also shut off. The master must sense and connect to an AC source before other inverters can connect.

In a parallel-stacked system, the master tends to be the most heavily used unit.

“Subphase master” inverters are used in series or three-phase systems. A subphase master inverter operates semi-independently of the master inverter. Although the master inverter sets the phase relationship, the subphase master creates an output independent of the master.

The master on the L1 (or A phase) output cannot measure loads and voltages on any other output. The subphase masters for the other outputs perform monitoring and regulation for the phase they control.

- ~ In a series or series/parallel-stacked system, a subphase master is required for the L2 output.
- ~ In a three-phase system, subphase masters are required for both the B and C phases.
- A slave inverter does not create an independent output. It simply assists the master or subphase master by adding power to the output as needed.
  - ~ The Power Save function can place slave inverters in “Silent” mode when not in use. They are activated by the master or subphase master when required.

**NOTE:** The FW-X240 and similar transformers are not used for load balancing of stacked FXR inverters.

Each inverter is assigned to a particular phase when assigned a port on the HUB10.3 communications manager. Port assignments will vary with the system. The master must be plugged into port 1. In parallel stacking, any slave inverter can use any other port, beginning with port 2. In series or three-phase stacking, the port assignments are very specific. See the HUB10.3 literature for more information. Regardless, it is important to keep track of units and ports for programming purposes.

Programming uses the system display to assign a status and stacking value to the inverter on each port. As long as the master is plugged into port 1, these assignments can be changed as needed.





## IMPORTANT:


- The master inverter must always be connected to port 1 on the communications manager. Connecting it elsewhere, or connecting a slave to port 1, will result in backfeed or output voltage errors which will shut the system down immediately.
- Installing multiple inverters without stacking them (or stacking them incorrectly) will result in similar errors and shutdown.
- Although stacking allows greater capacity, the loads, wiring, and overcurrent devices must still be sized appropriately. Overloading may cause circuit breakers to open or the inverters to shut down.

## Stacking Configurations

### Series Stacking (Dual-Stack)

In series stacking, two inverters create two separate 120 Vac<sup>4</sup> output phases ("legs"). One leg is the master. The second inverter is a subphase master. It creates a 120 Vac output that is intentionally 180° out of phase with the master. Each of these legs can be used to power a separate set of 120 Vac loads. Collectively they form a "split-phase" configuration. This configuration produces 240 Vac, which can be used to power 240 Vac loads when both inverters work together.

- The two legs operate independently of each other. The 120 Vac loads on each leg cannot exceed a given inverter's size. The second inverter cannot assist.
- Only two inverters, one per leg, may be installed in a series arrangement. They must be the same model.

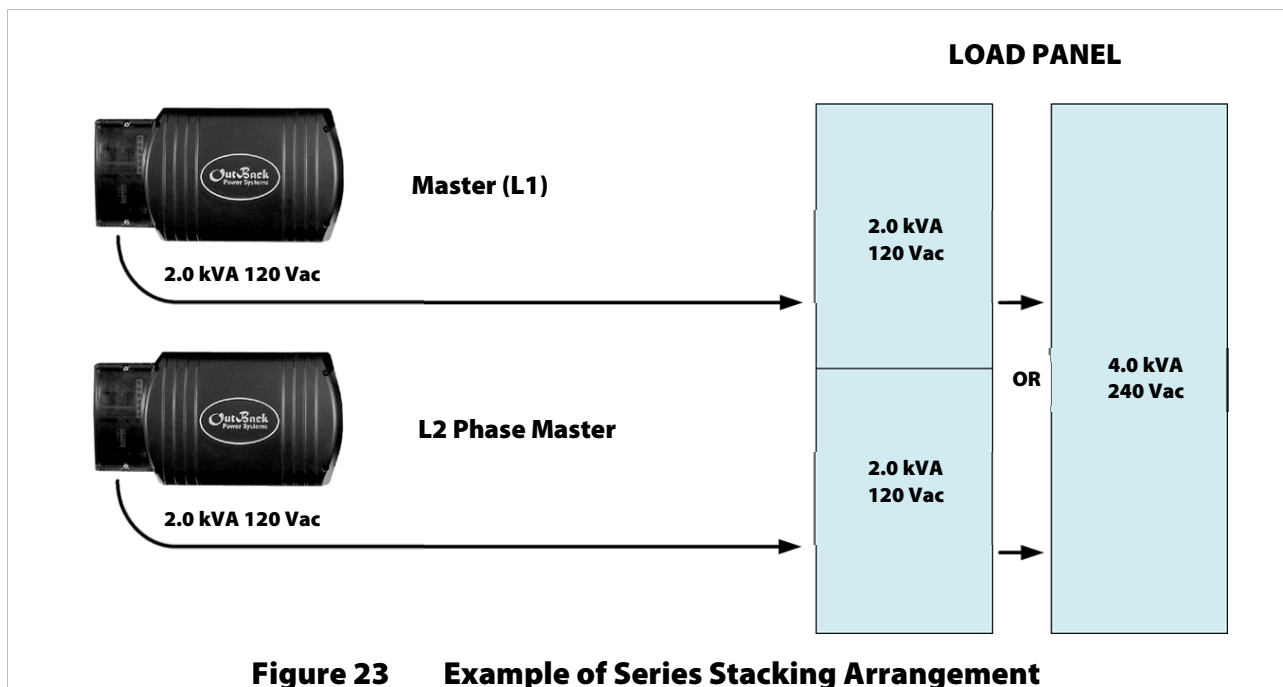

When installing a series inverter system, observe the following rules.


- Series stacking requires both the system display and the communications manager. See the HUB10.3 literature for any required jumper configurations.
- The master must be connected to communications manager port 1. It is programmed as **Master**. Other inverters must not be selected as master.

<sup>4</sup> Output voltages may vary with regional voltage standards.

## Installation

- The second inverter must be programmed as **L2 Phase Master**. It must be connected to port 7.
- All overcurrent devices must be sized for 60 Aac or less. All wiring must be sized for 60 Aac or more.
- All output circuit breakers must be sized appropriately for loads and inverter power.
- The AC input (generator or utility grid) must be a split-phase source of the proper voltage and frequency.
- When wiring the AC source to the inverters, local codes may require the inverter circuit breakers to be located at the bottom of the main panel. This prevents overloading of the AC bus.

**NOTE:** The FW-X240 and similar transformers are not used for load balancing of stacked FXR inverters.

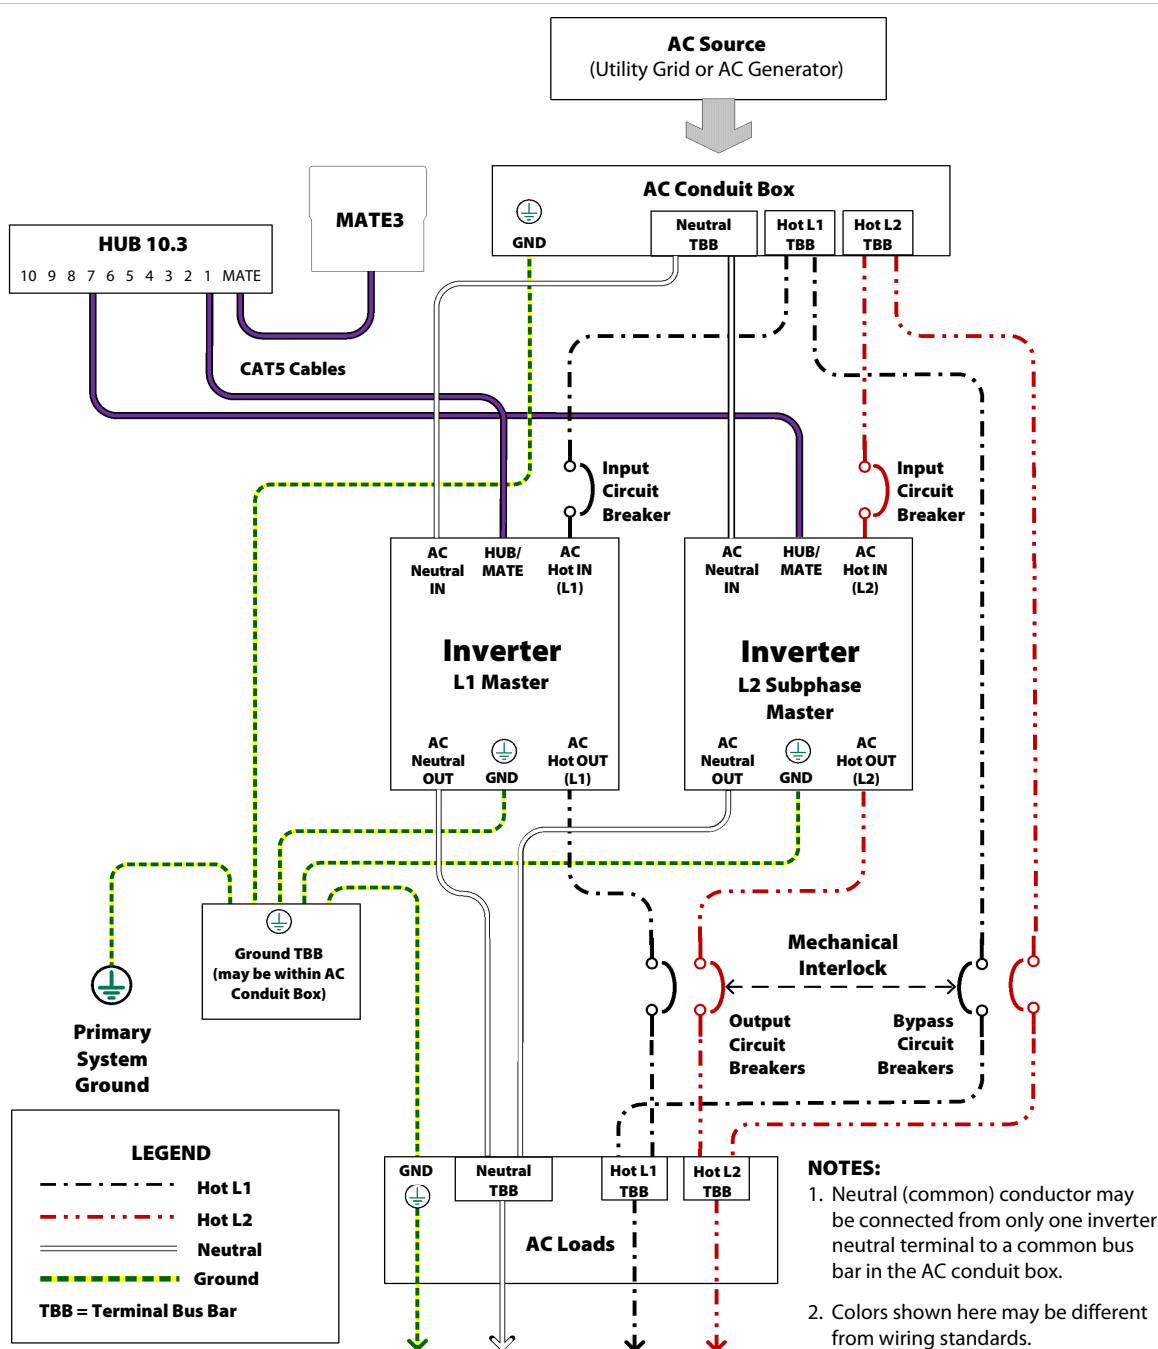


**Figure 24 Series Wiring (Two Inverters)**




## Parallel Stacking (Dual-Stack and Larger)

In parallel stacking, two or more inverters create a single, common 120 Vac<sup>5</sup> bus.

- The slave outputs are controlled directly by the master and cannot operate independently.
- All inverters share a common input (AC source) and run loads on a common output.
- Slave inverters can go into Silent mode when not in use. The master will activate individual slaves based on load demand. This reduces idle power consumption and improves system efficiency.
- Up to ten inverters may be installed in a parallel arrangement. The example on this page shows three inverters. The wiring diagram on the next page shows four. All inverters must be the same model.

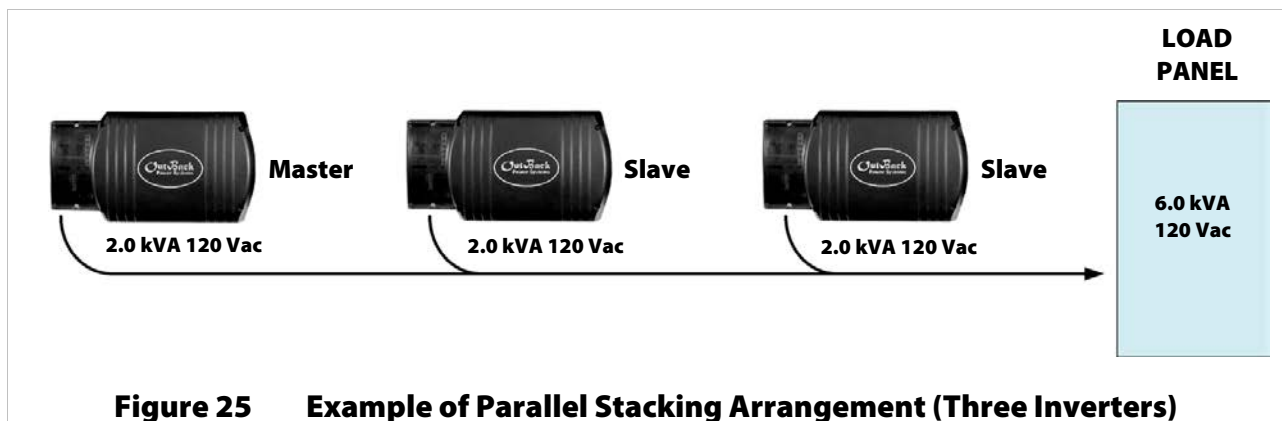


When installing a parallel inverter system, observe the following rules.

- Parallel stacking requires both the system display and the communications manager. See the HUB10.3 literature for any required jumper configurations.
- The inverter that is mounted physically lowest is always the master and is programmed as **Master**.  Mounting below the other inverters allows the master to avoid heat buildup and remain relatively cool as it sees the greatest duty cycle.
- The master must be connected to port 1 of the communications manager. Other inverters must not be selected as master.
- All slave inverters, regardless of number, should be selected as **Slave** during programming. Slaves can be connected to any port numbered 2 and above.
- All overcurrent devices must be sized for 60 Aac or less. All wiring must be sized for 60 Aac or more.
- All output circuit breakers must be sized appropriately for loads and inverter power.
- The AC input (generator or utility grid) must be a single-phase source of the proper voltage and frequency.
- When wiring the AC source to the inverters, local codes may require the inverter circuits to be located at the opposite end of the panel from the main circuit breaker. This prevents overloading of the AC bus.

<sup>5</sup> Output voltages may vary with regional voltage standards.  
900-0166-01-00 Rev A

# Installation

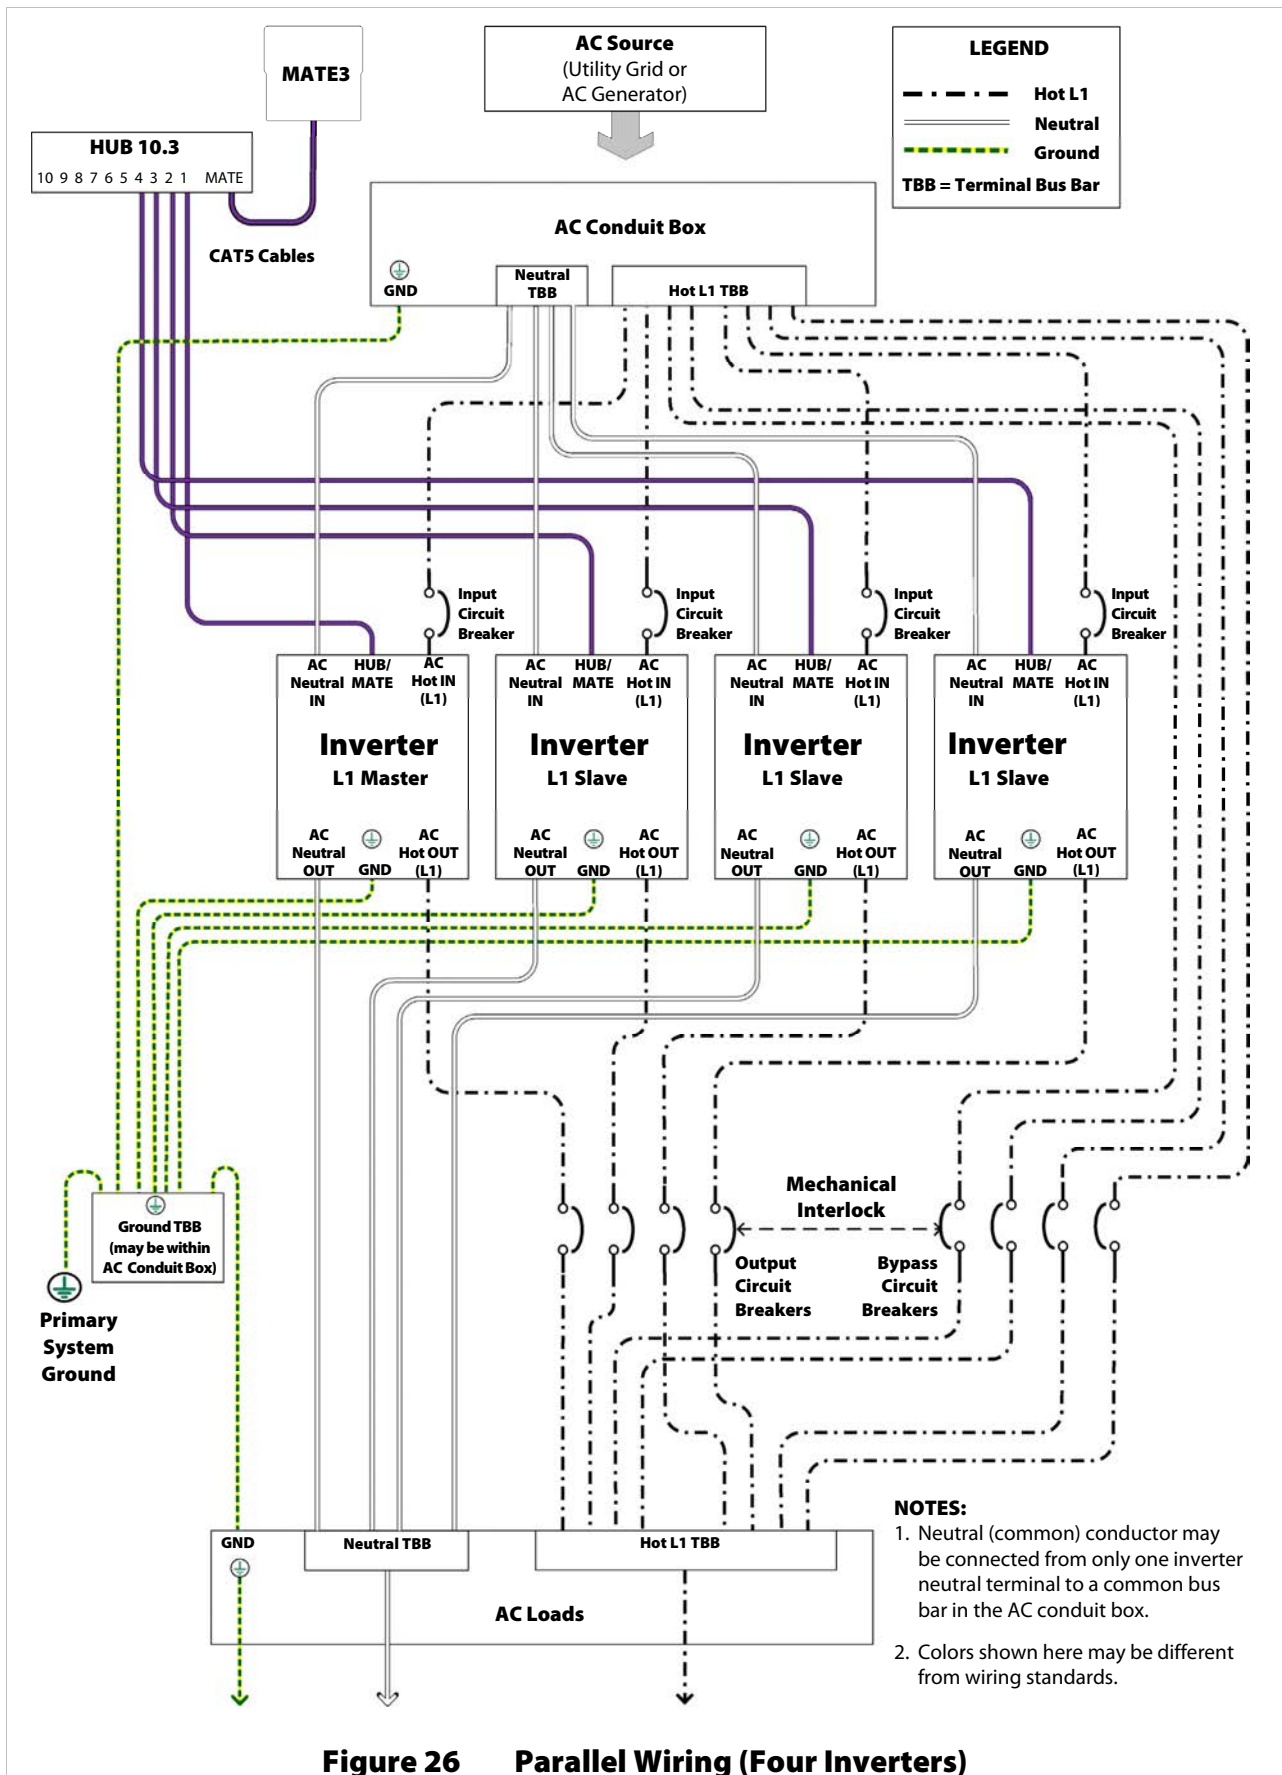


**Figure 26 Parallel Wiring (Four Inverters)**


## Series/Parallel Stacking (Quad-Stack or Larger)

In series/parallel stacking, inverters create separate 120 Vac<sup>6</sup> output legs and 240 Vac collectively, as in series stacking. However, in this configuration, each output has parallel inverters. One output contains the master; the other uses a subphase master. Each output has at least one slave.

- The 120 Vac loads on each leg can exceed the size of a single inverter. They can be powered by all the inverters on that leg.
- The slave outputs are controlled directly by their respective master inverters. They cannot operate independently. The slaves can go into Power Save mode when not in use.
- Up to eight inverters may be installed in a series/parallel arrangement. All inverters must be the same model.

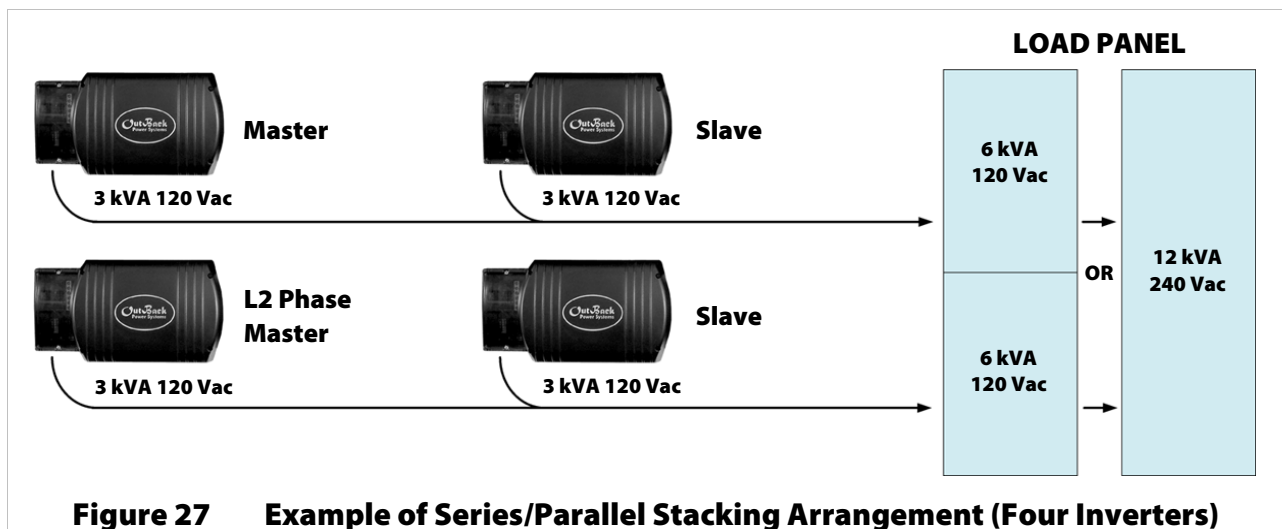


When installing a multiple-inverter series/parallel system, observe the following rules.

- Series/parallel stacking requires both the system display and the communications manager. See the HUB10.3 literature for any required jumper configurations.
- The inverter that is mounted physically lowest is always master and is programmed as **Master**.  Mounting below the other inverters allows the master to avoid heat buildup and remain relatively cool as it sees the greatest duty cycle.
- The master must be connected to port 1 of the communications manager. Other inverters must not be selected as master.
- Any other inverter on the L1 output (parallel with the master) should be selected as **Slave** during programming. These can be connected to ports 2 through 4. L1 inverters cannot use other ports.
- The subphase master for the L2 output must be programmed as **L2 Phase Master**. It must be connected to port 7.
- Any other inverter on the L2 output (parallel with the subphase master) should be selected as **Slave** during programming. These can be connected to ports 8 through 10. L2 inverters cannot use other ports.
- All overcurrent devices must be sized for 60 Aac or less. All wiring must be sized for 60 Aac or more.
- All output circuit breakers must be sized appropriately for loads and inverter power.
- The AC input (generator or utility grid) must be a split-phase source of the proper voltage and frequency.
- When wiring the AC source to the inverters, local codes may require the inverter circuits to be located at the opposite end of the panel from the main circuit breaker. This prevents overloading of the AC bus.

**NOTE:** The FW-X240 and similar transformers are not used for load balancing of stacked FXR inverters.

<sup>6</sup> Output voltages may vary with regional voltage standards.

# Installation


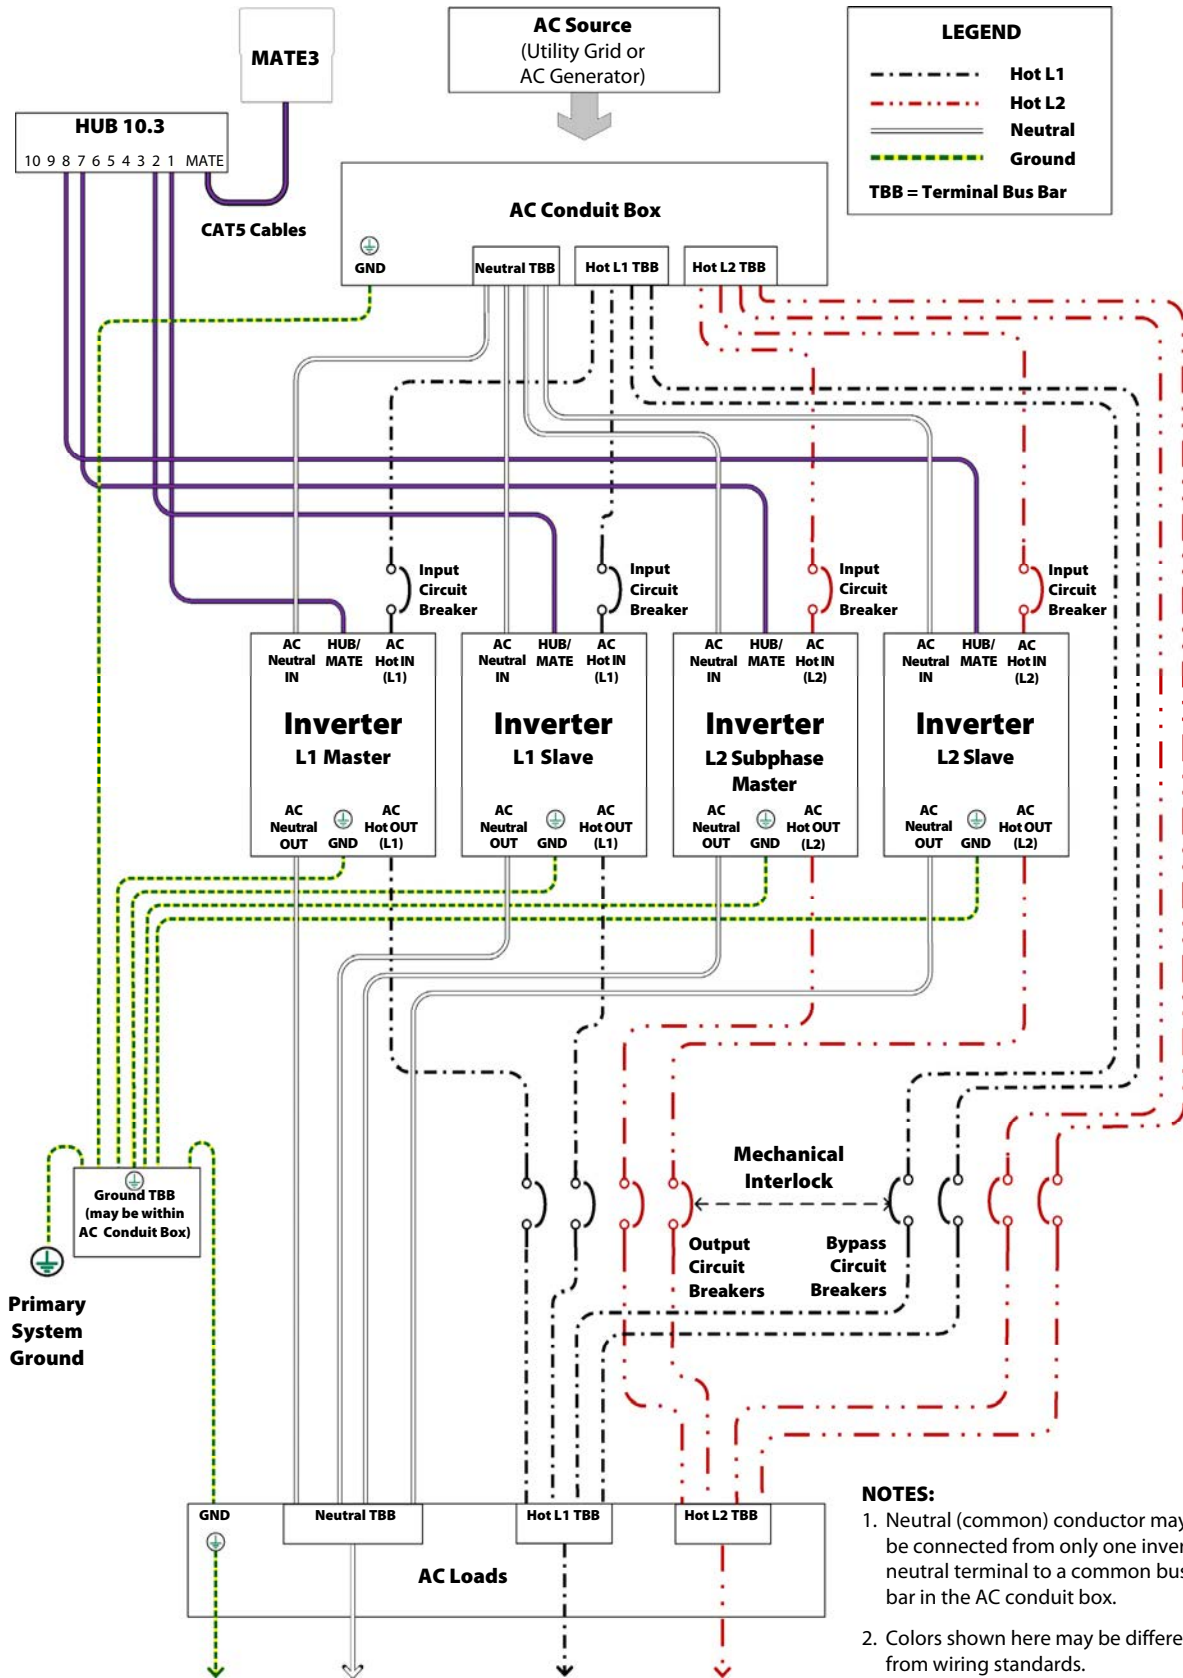


**Figure 28 Series/Parallel Wiring**

## Three-Phase Stacking

In three-phase stacking, inverters create three separate 120 Vac<sup>7</sup> output legs in a wye configuration.


- The three legs operate independently of each other. The inverters on one leg cannot assist another. Several inverters can be installed in parallel on one leg to power all 120 Vac loads on that leg.
- The output of each inverter is 120° out of phase from the others. Any two outputs produce 208 Vac between them. The outputs can be used to power three-phase loads when all inverters work together.
- Up to nine inverters, three per phase, may be installed in a three-phase arrangement. (The wiring drawing on the next page shows only one inverter per phase.) All inverters must be the same model.

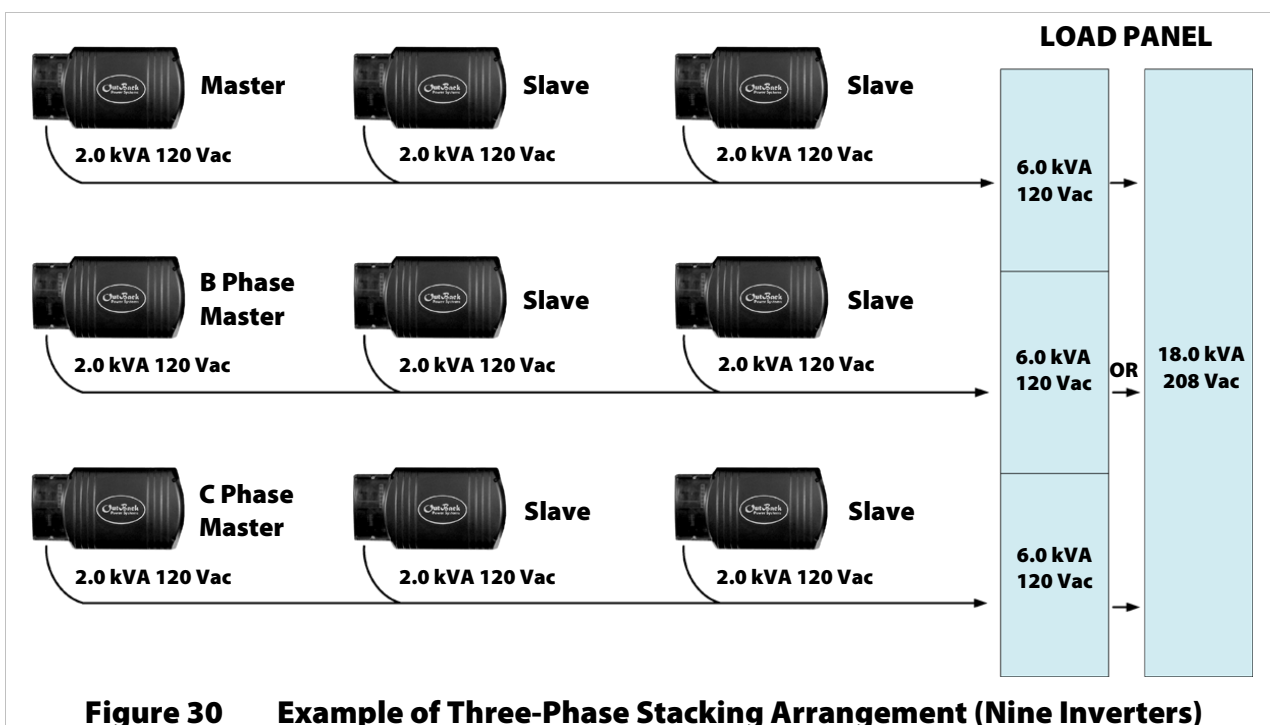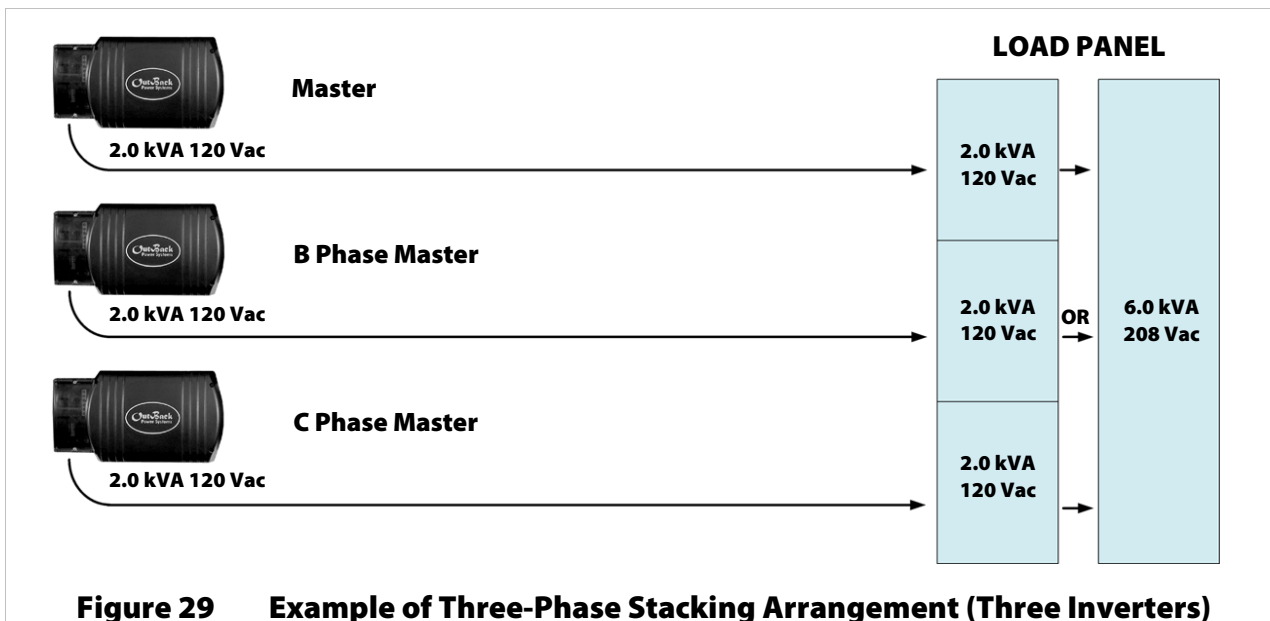


<sup>7</sup> Output voltages may vary with regional voltage standards.

## Installation

When installing a three-phase system, observe the following rules.

- Three-phase stacking requires both the system display and the communications manager. See the HUB10.3 literature for any required jumper configurations.
- The inverter that is mounted physically lowest is always master and is programmed as **Master**.  Mounting below the other inverters allows the master to avoid heat buildup and remain relatively cool as it sees the greatest duty cycle.
- The master must be connected to port 1 of the communications manager. Other inverters must not be selected as master.
- Any other inverter on the Phase A output (parallel with the master) should be selected as **Slave** during programming. These can be connected to ports 2 or 3. Phase A inverters cannot use other ports.
- The subphase master for the Phase B output must be programmed as **B Phase Master**. It must be connected to port 4.
- Any other inverter on the Phase B output (parallel with the B subphase master) should be selected as **Slave** during programming. These can be connected to ports 5 or 6. Phase B inverters cannot use other ports.
- The subphase master for the Phase C output must be programmed as **C Phase Master**. It must be connected to port 7.
- Any other inverter on the Phase C output (parallel with the C subphase master) should be selected as **Slave** during programming. These can be connected to ports 8, 9, or 10. Phase C inverters cannot use other ports.
- All overcurrent devices must be sized for 60 Aac or less. All wiring must be sized for 60 Aac or more.
- All output circuit breakers must be sized appropriately for loads and inverter power.
- The AC input (generator or utility grid) must be a three-phase wye configuration source of the proper voltage and frequency.
- When wiring the AC source to the inverters, local codes may require the inverter circuits to be located at the opposite end of the panel from the main circuit breaker. This prevents overloading of the AC bus.

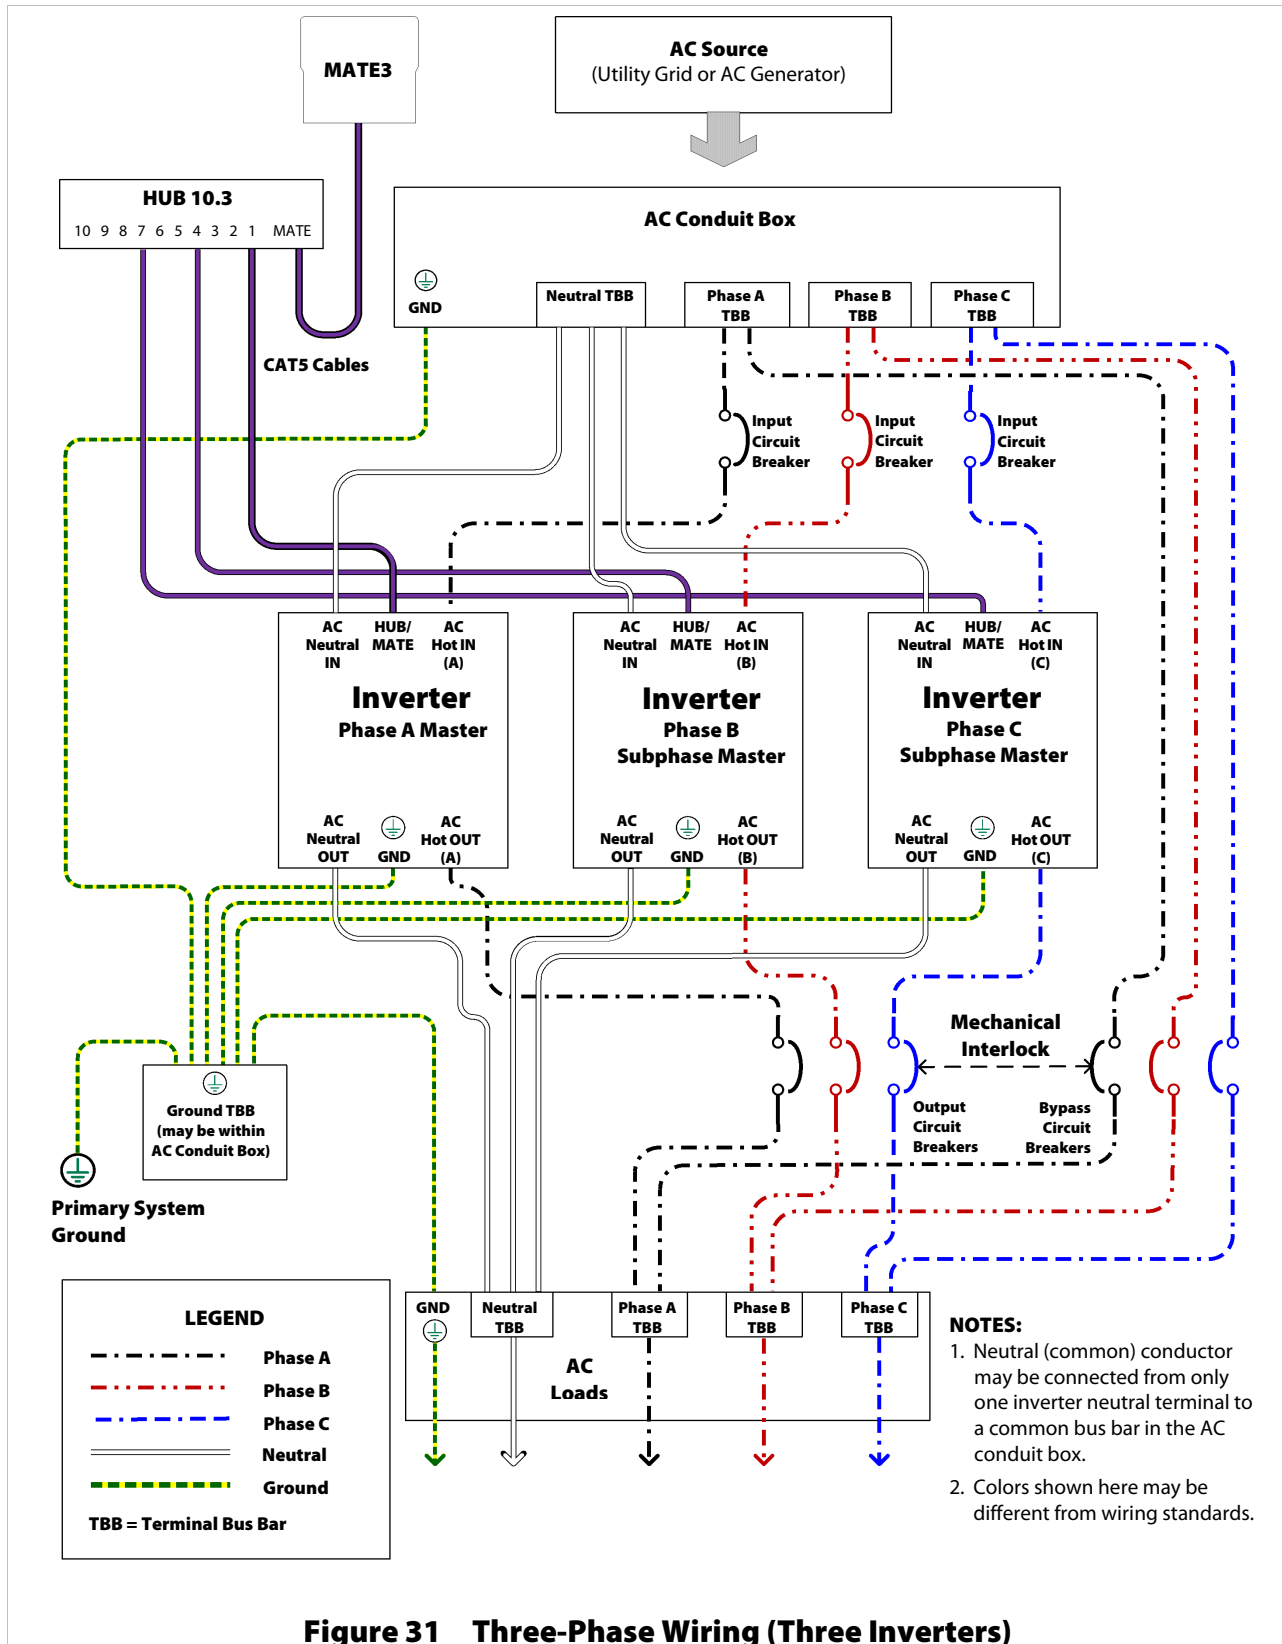


### Functional Test




Once the mounting, wiring, and other installation steps are completed, proceed to the *FXR Series Inverter/Charger Operator's Manual*. The *Operator's Manual* has steps for system commissioning. These include powering up and performing a functional test on the inverter system, as well as powering down and adding new devices to an existing system.

Refer to the system display manual for programming instructions and menus.

### Emissions

Compliance with FCC Part 15.109(G): 2012 Class B is achieved with installation of EMC kit FXR-FILTER or equivalent. Installation instructions for FXR-FILTER are available. 

### Symbols Used

	<b>WARNING: Hazard to Human Life</b> This type of notation indicates that the hazard could be harmful to human life.
	<b>CAUTION: Hazard to Equipment</b> This type of notation indicates that the hazard may cause damage to the equipment.
	<b>IMPORTANT:</b> This type of notation indicates that the information provided is important to the installation, operation and/or maintenance of the equipment. Failure to follow the recommendations in such a notation could result in voiding the equipment warranty.



#### MORE INFORMATION

When this symbol appears next to text, it means that more information is available in other manuals relating to the subject. The most common reference is to the *Operator's Manual* for the appropriate inverter model. Another common reference is the system display manual.



## Definitions

The following is a list of initials, terms, and definitions used with this product.

**Table 6 Terms and Definitions**

Term	Definition
AC	Alternating Current; refers to voltage produced by the inverter, utility grid, or generator
AC Plate	Inverter accessory to accommodate flexible cable when conduit is not used
AGS	Advanced Generator Start
AUX	Inverter's 12-volt auxiliary output
Communications manager	Multi-port device such as the OutBack HUB10.3; used for connecting multiple OutBack devices on a single remote display; essential for stacking inverters
CSA	Canadian Standards Association; establishes Canadian national standards and the Canadian Electrical Code, including C22.1 and C22.2
DC	Direct Current; refers to voltage produced by the batteries or renewable source
DCC	DC Cover; shields the DC terminal area on vented FXR inverters
DVM	Digital Voltmeter
ETL	Electrical Testing Laboratories; short for the company ETL Semko; refers to a certification issued by ETL to OutBack products indicating that they meet certain UL standards
GFDI	Ground Fault Detector Interruptor; a safety device for PV systems
GND	Ground; a permanent conductive connection to earth for safety reasons; also known as Chassis Ground, Protective Earth, and PE
Grid-interactive, grid-intertie, grid-tie	Utility grid power is available for use and the inverter is capable of returning (selling) electricity back to the utility grid
HUB10.3	An OutBack communications manager product; used for system stacking and coordination
LED	Light-Emitting Diode; refers to indicators used by the inverter and the system display
Master	An inverter which provides the primary output phase of a stacked system; other stacked inverters base their output and on/off state on the master
MATE3	An OutBack system display product, used for monitoring, programming and communicating with the inverter
NEU	AC Neutral; also known as Common
Neutral-to-ground bond	A mechanical connection between the AC neutral (Common) bus and the ground (PE) bus; this bond makes the AC neutral safe to handle
Off-grid	Utility grid power <b>is not</b> available for use
On-grid	Utility grid power is available for use (does not imply grid-interactive capability)
PV	Photovoltaic
RE	Renewable Energy

## Table 6 Terms and Definitions

Term	Definition
RTS	Remote Temperature Sensor; accessory that measures battery temperature for charging
Slave	An inverter which adds additional power to the master or subphase master in a stacked system; a slave does not provide an output of its own
Split-phase	A type of utility electrical system with two “hot” lines that typically carry 120 Vac with respect to neutral and 240 Vac with respect to each other; common in North America
Subphase Master	An inverter which provides the output for additional phases of a stacked system; the output of a subphase master is based on the output of the master
System display	Remote interface device (such as the MATE3), used for monitoring, programming and communicating with the inverter; also called “remote system display”
Three-phase, 3-phase	A type of utility electrical system with three “hot” lines, each 120° out of phase; each carries the nominal line voltage with respect to neutral; each carries voltage with respect to each other equaling the line voltage multiplied by 1.732
Turbo Fan	External cooling fan used in place of the DCC on sealed FXR inverters
UL	Underwriters Laboratories; refers to a set of safety standards governing electrical products
Utility grid	The electrical service and infrastructure supported by the electrical or utility company; also called “mains”, “utility service”, or “grid”

**NOTES:**

[illegible]



# Index

## A

AC Plate.....	6
AC Terminals .....	9, 17, 23
Advanced Generator Start (AGS).....	27
Applications .....	9
Automatic Generator Start .....	27
AUX Terminals .....	17
AXS Port.....	5

## B

Battery Bank .....	11
Sizing.....	12
Battery Terminal Covers .....	6, 21

## C

Communication Cables .....	17, 25, 30
Communications Manager	
Connections.....	17, 25, 30
Stacking.....	31, 33, 35, 37
Components .....	6
Conductor Size	
AC Conductors .....	23
DC Conductors .....	20
Ground Conductors .....	18
Control Wiring Terminal Block .....	17

## D

DC Cover (DCC) .....	6, 15, 22
DC Terminals .....	17, 20, 21
Definitions.....	41
Dimensions.....	16
Diversion Control.....	26
Drawings	
General System Layout .....	9
Parallel-Stacked System.....	34
Series/Parallel System .....	35
Series-Stacked System .....	32
Single-Inverter System .....	29
Three-Phase System.....	39
DVM.....	15

## E

EMC .....	40
Emergency Power Off (EPO) .....	25
Emissions.....	40
Environmental Requirements .....	15

## F

FCC Class B.....	40
Features .....	5
Filter .....	40
Functional Test.....	40

## G

Gen Alert.....	27
Generator .....	29, 31, 33, 35, 37
Applications.....	9, 24
Control.....	27, 28
Sizing.....	13
Type.....	13
GFDI.....	18, 41
Grid-Interactive .....	9, 41
Grounding.....	17, 18

## H

HUB10.3 .....	25, 30
---------------	--------

## I

Ingress Protection (IP).....	15
Input Modes .....	10

## J

Jumper .....	17, 25
--------------	--------

## L

LED Indicators.....	17
Listings .....	5
Location .....	15

# Index

## M

Master (Stacking).....	30, 31, 33, 35, 37
MATE/HUB Port.....	25
MATE3.....	5, 25, 30, 42
Models.....	6
Modes.....	10
Mounting.....	16
Multiple AC Sources.....	24

## N

Neutral-Ground Bonding.....	13, 18, 23
-----------------------------	------------

## O

On and Off.....	17, 25
OPTICS RE.....	5

## P

Parallel Stacking.....	33
Ports, RJ45 and RJ11.....	17, 25
Positive Grounding.....	18
PV.....	9, 10

## R

Relative Humidity (RH).....	15
Remote Temperature Sensor (RTS).....	6, 17, 25
Renewable Energy.....	10

## S

Sealed Models.....	6, 15
Series Stacking.....	31
Series/Parallel Stacking.....	35
Sizing.....	29
Slave (Stacking).....	30, 33, 35, 37
Stacking.....	30
Parallel.....	33
Series.....	31
Series/Parallel.....	35
Three-Phase.....	37
Stacking Mode Programming.....	31
Subphase Master (Stacking).....	30, 31, 35, 37

Symbols Used.....	40
System Display.....	40, 42
Connections.....	17, 25
Programming.....	13, 26, 27, 30
Stacking.....	31, 33, 35, 37

## T

Temperatures.....	15
Terms and Definitions.....	41
Test.....	40
Three-Phase Stacking.....	37
Tools Required.....	15
Torque Requirements	
AC Terminals.....	23
DC Terminals.....	20
Ground Terminals.....	18
Transformer.....	13
Turbo Fan.....	6, 22

## U

Utility Grid.....	29, 31, 33, 35, 37
Applications.....	9, 24

## V

Vent Fan.....	26
Vented Models.....	6, 15

## W

Wiring.....	18
AC Connections.....	23
AUX Connections.....	26
DC Connections.....	20
Ground Connections.....	18
Single Inverter.....	29
Stacking	
Parallel.....	34
Series.....	32
Series/Parallel.....	35
Three-phase.....	39

## X

XCT.....	17
----------	----

**This page intentionally left blank.**

**This page intentionally left blank.**

**This page intentionally left blank.**



**Masters of the Off-Grid.™ First Choice for the New Grid.**

Corporate Headquarters  
17825 – 59<sup>th</sup> Avenue N.E.  
Suite B  
Arlington, WA 98223 USA  
+1.360.435.6030

European Office  
Hansastraße 8  
D-91126  
Schwabach, Germany  
+49.9122.79889.0